


Toyota LC 120 / Lexus GX470 Cargo Barrier Installation Guide

120-CARGO-ONLY

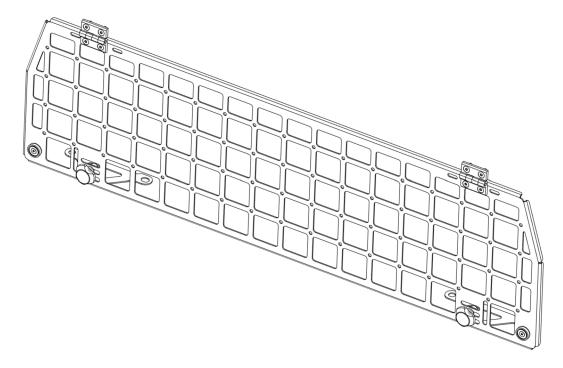

Before you start

Familiarize yourself with these instructions. This product is shipped with one parcel. Ensure that all listed parts and hardware are present in package.

Gather the required tools. The installation will necessitate the assistance of one adult.

bison-gear.com Page **1** of **7**



Part list

LP	PART	QTY	IMAGE
1	CARGO-120 – Cargo barrier	1	
2	CARGO-120 – Headrest bracket	2	
3	Hinge	2	
4	Magnet	2	

bison-gear.com Page 2 of 7



5	Knob	2	
6	Countersunk screw M6x16 DIN 7991	8	
7	Countersunk screw M5x18 DIN 7991	2	
8	Flange nut M6 DIN 6923	8	
9	Blind nut M5 DIN 917	2	
10	Flat washer M5 DIN 125	2	

bison-gear.com Page **3** of **7**



List of necessary tools¹:


- 3 mm Allen Key (Hex)
- 4 mm Allen Key (Hex)
- 8 mm wrench
- 10 mm wrench

bison-gear.com Page **4** of **7**

¹ The tools **are not** included in the set.



Cargo Barrier Diagram

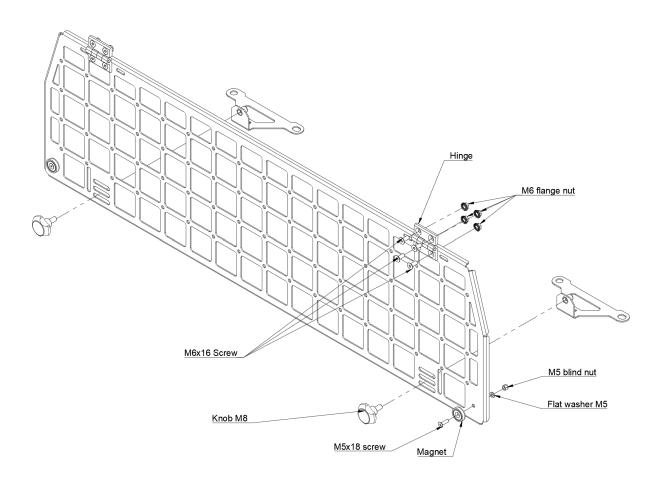

bison-gear.com Page **5** of **7**



Installation:

Before you start to work, familiarize with the **Cargo Barrier Diagram** on **page 5**. There is an exploded view that shows you how to install the cargo barrier. Follow the steps below to install the cargo barrier correctly:

- Screw the magnets using M5x18 screws and M5 blind nut. (Sometimes the magnets are just screwed to the cargo barrier, and you do not have to do it).
- 2. Pre-screw the hinges to the barrier using M6x16 bolts and M6 nuts.
- 3. Remove the **headrest of your car** and put the **headrest bracket** on them (put the cylindrical parts into the bracket's holes) and install it back.

In the next step you must have assist of **one adult person** who will hold the cargo barrier during the mount.

- 4. Put the **cargo barrier** to the car and screw it to the Bison Gear's Underthe-Roof Shelf using **M6x16 screws** and **M6 nuts**.
- 5. Screw the **knobs** into the **headrest bracket** (there are 3 oblong holes, choose the best for you).
- Regulate the vertical and horizontal position of the shelf and screw all the bolts.

bison-gear.com Page 6 of 7



Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.

After driving 50km, check all the bolts and re-tighten them if necessary.

Have a great time with the Bison Gear product!



Email: contact@bison-gear.com

Phone: +48 505 642 981

bison-gear.com Page **7** of **7**