




BISON GEAR

Toyota Land Cruiser 150 / Lexus GX460 Cargo Barrier Installation Guide

150-CARGO-ONLY

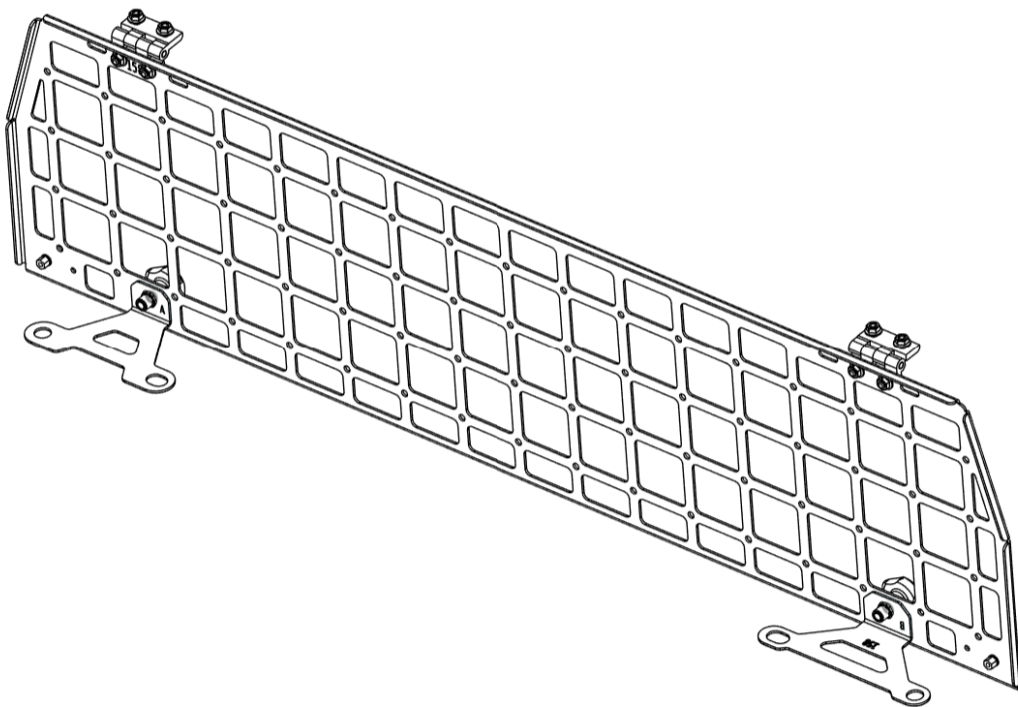

Before you start

Familiarize yourself with this instruction. Ensure that all listed parts and hardware are present.

Locate a flat surface or floor with a minimum area of **1 x 1.5 meters**.

Gather the required tools. The installation will necessitate the assistance of one adult.




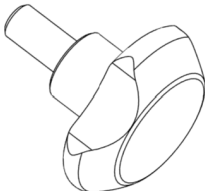
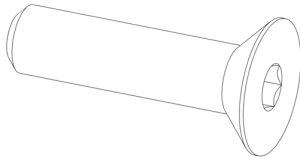
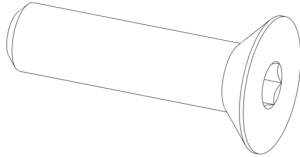
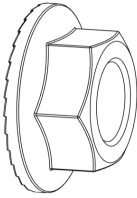
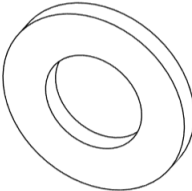
BISON GEAR




Part list

LP	PART	QTY	IMAGE
1	Cargo barrier	1	
2	Headrest bracket "A"	2	
3	Headrest bracket "B"	2	
4	Hinge	2	



5	Magnet	2	
6	Knob	2	
7	Countersunk screw M6x16 DIN 7991	8	
8	Countersunk screw M5x18 DIN 7991	2	
9	Flange nut M6 DIN 6923	8	
10	Flat washer M5 DIN 125	2	

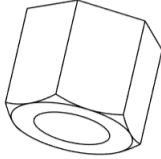

11	Blind nut M5 DIN 917	2	
----	-------------------------	---	--

List of necessary tools¹:


- 3 mm Allen Key (Hex)
- 4 mm Allen Key (Hex)
- 8 mm wrench
- 10 mm wrench

¹ NOTE: The tools **are not** included in the set.



BISON GEAR

Cargo Barrier Diagram

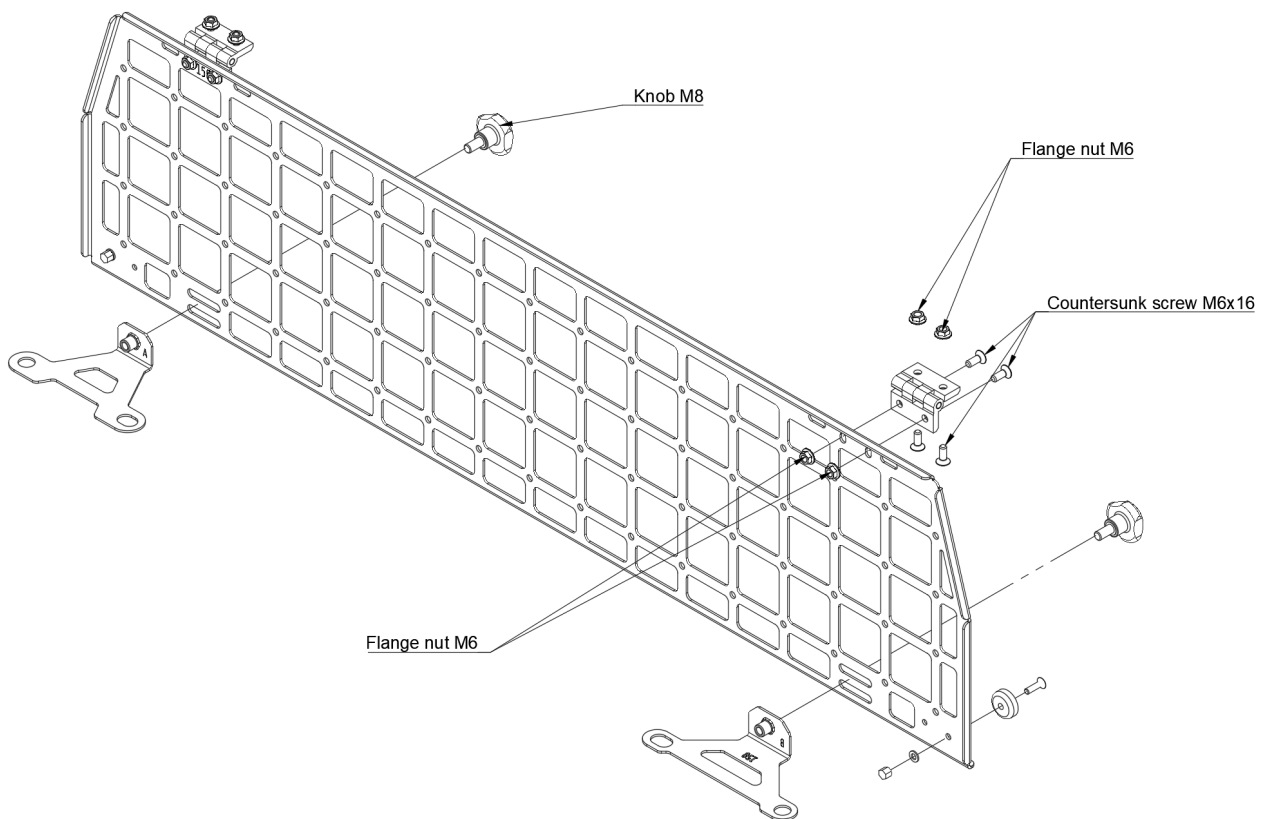



Installation:

Before you start to work, familiarize with the **Cargo Barrier Diagram** on **page 5**. There is an exploded view that shows you how to install the cargo barrier. Follow the steps below to install the cargo barrier correctly:

1. Screw the magnets using **M5x18 screws**, **M5 washers** and **M5 blind nuts**.
(Sometimes the magnets are just screwed to the cargo barrier, and you do not have to do it)
2. Pre-screw the hinges to the barrier using **M6x16 bolts** and **M6 flange nuts**.
3. Remove the **left and right headrests** from the backseat and put the **headrest bracket** on them (put the cylindrical parts into the bracket's holes) and install it back.

Important!

The set contains two types of headrests brackets – “A” and “B”. Choose that one which fits to your car. (Toyota produces cars with two types of headrests).



BISON GEAR

The next step is to have the assistance of one adult person who will hold the cargo barrier during the mount.

4. Put the **cargo barrier** to the car and screw it to the **Bison Gear Roof Shelf** using **M6x16 screws and M6 nuts**.
5. Screw the **knobs** into the headrest bracket (there are **2** oblong holes, choose the best for you).
6. Regulate the **vertical and horizontal position** of the bracket and screw all the bolts.

Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.

After driving 50 km, check all the bolts and re-tighten them if necessary.

Have a great time with the Bison Gear product!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**