


4Runner 5 Gen. Factory Rails External MOLLE Panel installation

1. Assemble the panel as shown in the images below, but do not tighten the nuts.

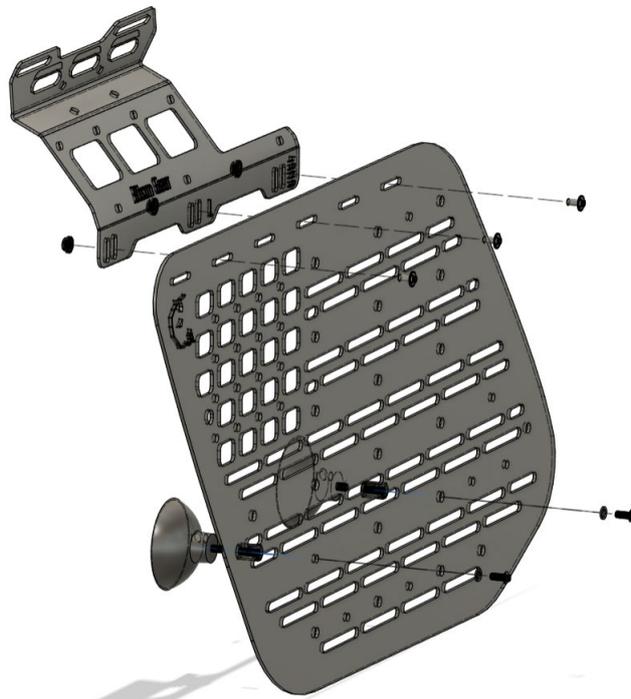




FRONT



BACK

2. Insert T-Bolts into the factory rail channel (move the bolt along the channel to find a wider space).

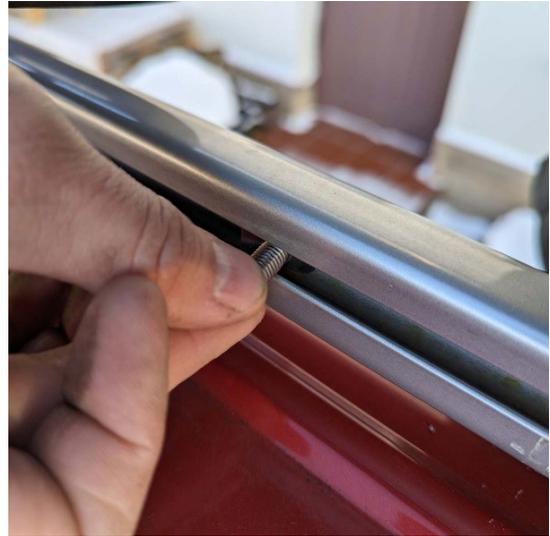

3. Rotate T-Bolts 90 degrees
4. Slide the preassembled panel under the rail.



5. Align the T-Bolts with the holes in the panel bracket



- a. Add washers and nuts
- b. Position the panel on the window

- c. tighten the nut, be sure that cut on the T-Bolt is vertical (use flat head screwdriver to keep it in place while tightening).



6. Tighten all nuts.
7. Done

