




**BISON GEAR**

# Toyota FJ Cruiser Cargo Baskets Installation Guide

**BOX-FJ-R; BOX-FJ-L**

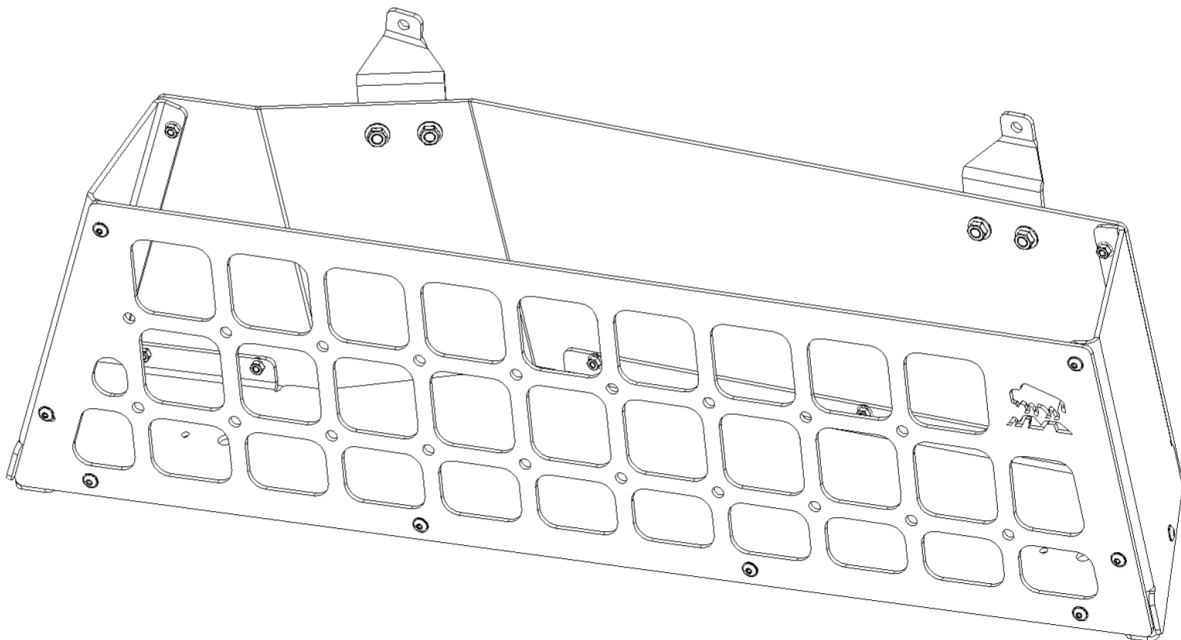





## Before you start

Familiarize yourself with these instructions. The Cargo Basket is shipped in one parcel. Ensure that all listed parts and hardware are present in the package. Gather the required tools.






**BISON GEAR**


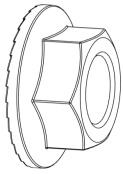
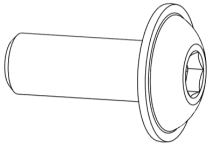
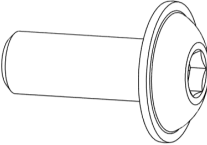

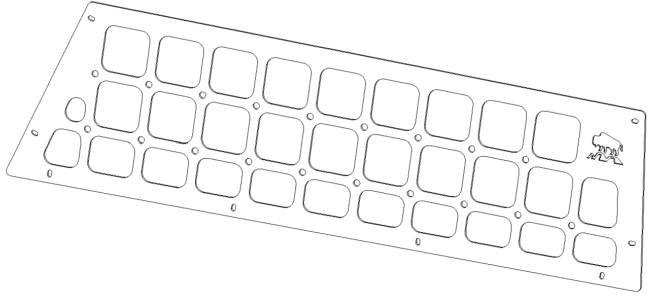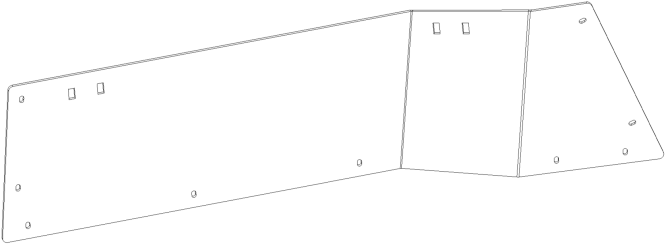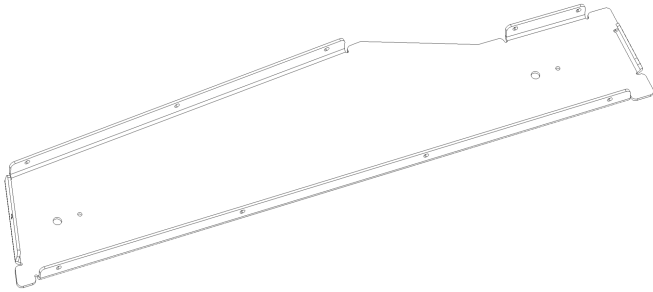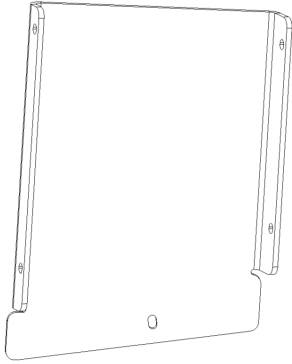
## Part list -Left box

No.	PART	QTY	IMAGE
1	Front Panel	1	
2	Back part left box	1	
3	Bottom part left box	1	
4	Left part left box	1	

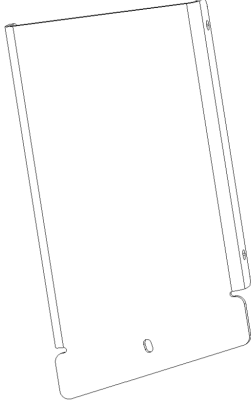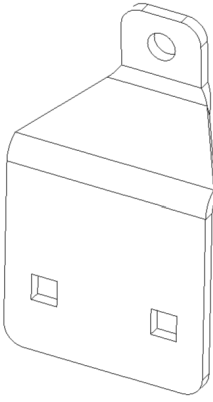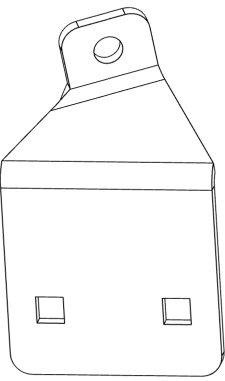

<b>5</b>	Right part left box	<b>1</b>	
<b>6</b>	Mounting bracket 1	<b>1</b>	
<b>7</b>	Mounting bracket 2L	<b>1</b>	







<b>8</b>	Flange nut M4 DIN-6923	<b>19</b>	
<b>9</b>	Flange nut M6 DIN-6923	<b>4</b>	
<b>10</b>	Flange bolt M4x10 ISO 7380-2	<b>19</b>	
<b>11</b>	Flange bolt M6x20 ISO 7380-2	<b>2</b>	
<b>12</b>	Carriage bolt M6x12 DIN-603	<b>4</b>	
<b>13</b>	Screw 4 x 12	<b>2</b>	






**BISON GEAR**



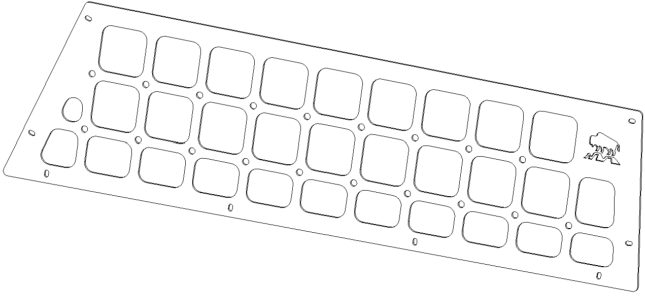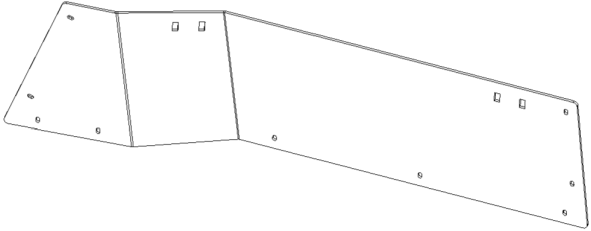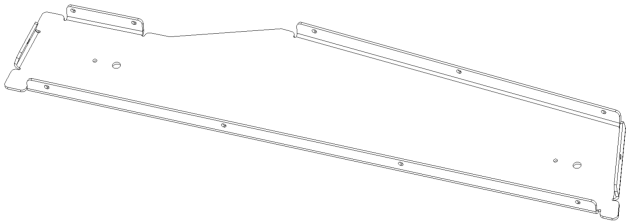
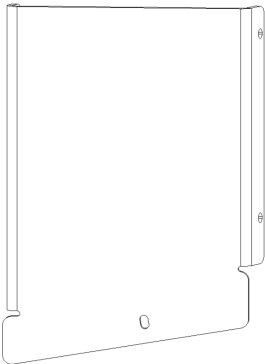


## Part list -Right box

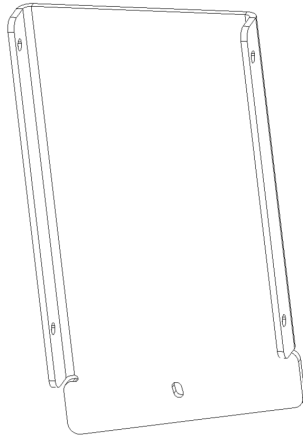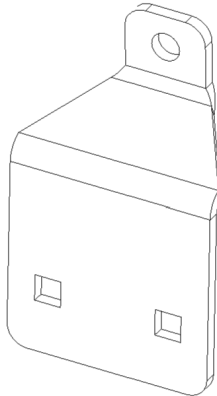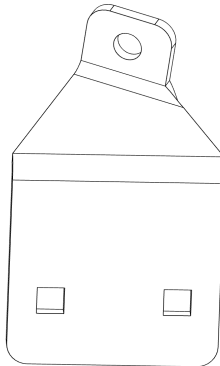No.	PART	QTY	IMAGE
1	Front Panel	1	
2	Back part right box	1	
3	Bottom part right box	1	
4	Right part right box	1	



<b>5</b>	Left part right box	<b>1</b>	
<b>6</b>	Mounting bracket 1	<b>1</b>	
<b>7</b>	Mounting bracket 2R	<b>1</b>	

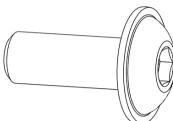

<b>8</b>	Flange nut M4 DIN-6923	<b>19</b>	
<b>9</b>	Flange nut M6 DIN-6923	<b>4</b>	
<b>10</b>	Flange bolt M4x10 ISO 7380-2	<b>19</b>	
<b>11</b>	Flange bolt M6x20 ISO 7380-2	<b>2</b>	
<b>12</b>	Carriage bolt M6x12 DIN-603	<b>4</b>	
<b>13</b>	Screw 4 x 12	<b>2</b>	

## List of necessary tools<sup>1</sup>:


- 2.5 mm Allen Key (Hex)
- 4 mm Allen Key (Hex)
- 7 mm wrench
- 10 mm wrench
- Phillips screwdriver

<sup>1</sup> NOTE: The tools **are not** the part of the set.



**BISON GEAR**

## Cargo Basket Diagram

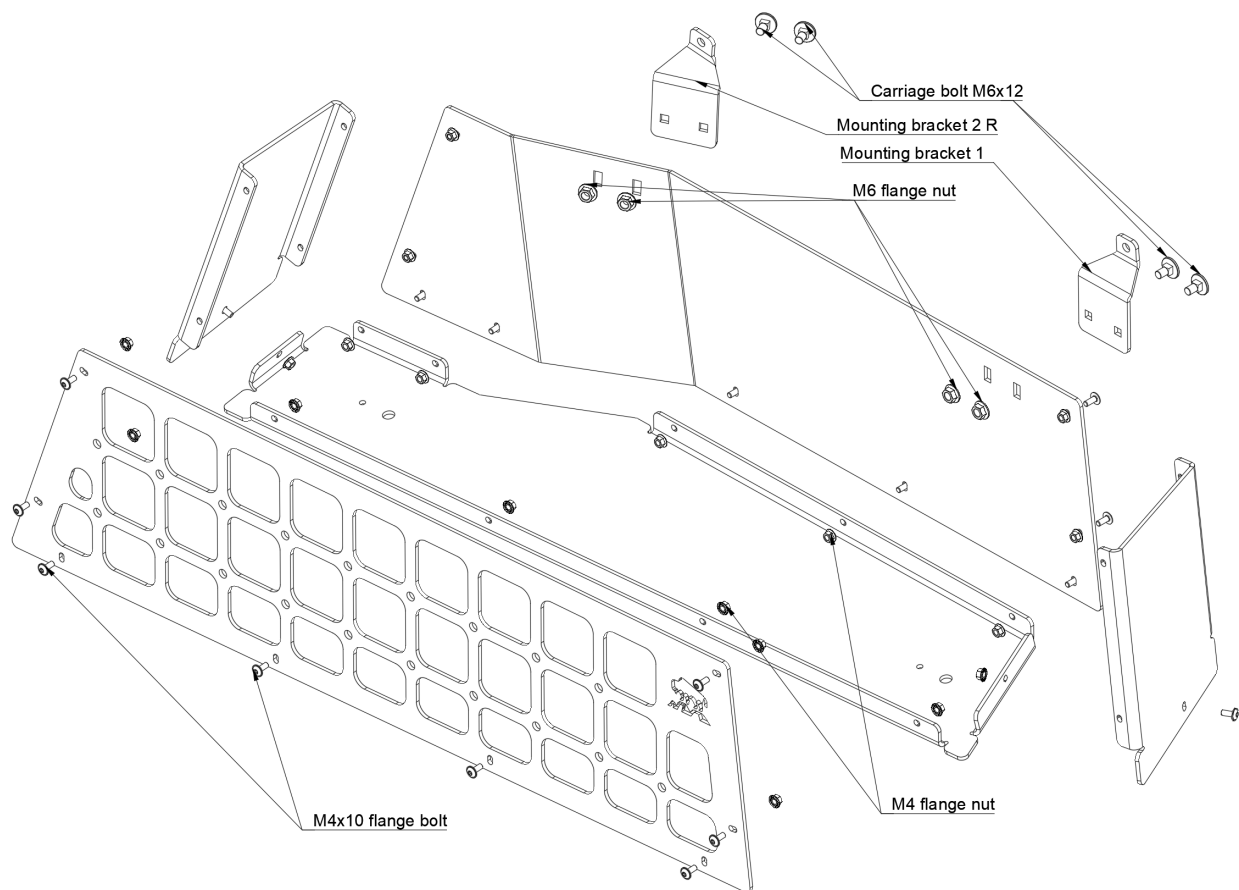





**BISON GEAR**

## Installation:

Before you start to work, familiarize with the **Cargo Basket Diagram** on **page 8**. There is an exploded view that shows you how to mount the basket parts together.

The example is shown for the **right basket**, the left basket is a **mirror look** so the installation scheme is similar.

Follow the steps below to install product correctly:

1. Start by preparing the product parts and gathering the necessary tools.
2. Pre-screw **back part**, **bottom part**, **side parts** and **front panel** together using **M4x10 flange bolts** and **M4 flange nuts**. The nuts should be screwed on the inside of the basket.
3. Adjust the **basket parts** if necessary and tighten **all the bolts and nuts**.
4. Pre-screw the **mounting brackets** to the basket using **M6x12 carriage bolt** and **M6 flange nut**.

Now you are ready to install the basket inside the car.



**BISON GEAR**

5. You need to unscrew **two plastic holders** (see picture below) inside the trunk. Use a **10 mm socket** or **Phillips screwdriver**.



6. Place the **basket** on the left/right side of the car and screw the **upper brackets**, in the place of previously removed plastic holders, using **M6x20 flange bolts**.
7. Adjust the **position**, push down the basket and tighten the **bolts and nuts**.

**8. (OPTIONAL but RECOMMENDED)**

The installation kit contains additional 2 Phillips screws. In the bottom of the basket are **2 small holes** and **2 bigger holes**. Screw the basket to the plastic car body through the small holes using **Phillips screws**.

Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.



**BISON GEAR**

**After driving 50km check all the bolts and retighten them if necessary.**

**Have a great time with the Bison Gear product!**



Email: [contact@bison-gear.com](mailto:contact@bison-gear.com)

Phone: +48 505 642 981