




**BISON GEAR**

# INEOS Grenadier Cargo Basket Installation Guide

**BOX-GRND-LEFT, BOX-GRND-RIGHT, BOX-GRND-LEFT-INV**

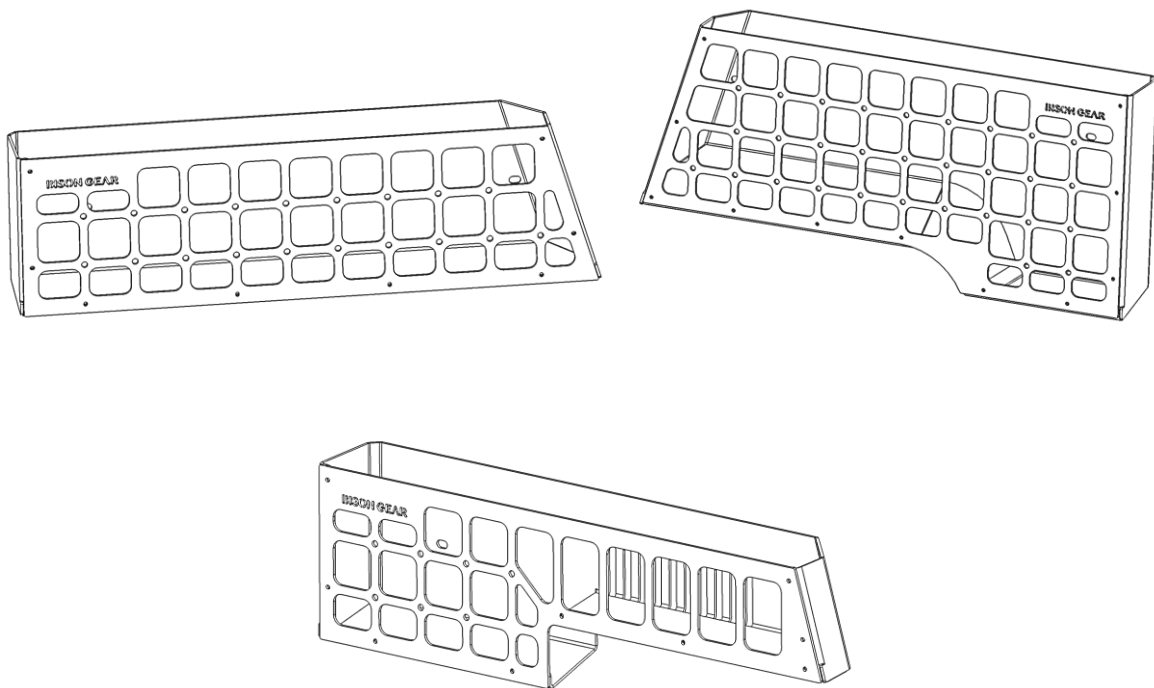





## Before you start

Familiarize yourself with this instruction. Instruction is valid for all basket (left, right, left with inverter cutouts ). Ensure that all listed parts and hardware are present in package. Gather the required tools.





**BISON GEAR**
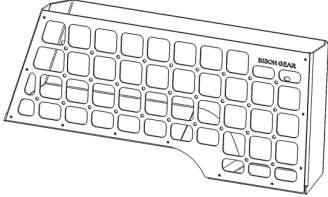
## ⚙ Part list – Right basket


LP	PART	QTY	IMAGE
1	Right Basket	1	
2	Sleeve 10/20 H-25	2	
3	Bolt M8x60 ISO 7380-2	2	
4	O-ring	2	

## ⚙ Part list – Left basket

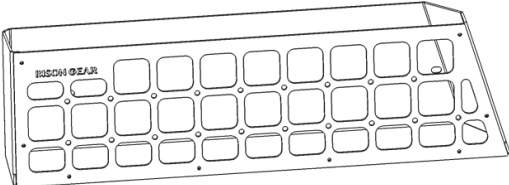LP	PART	QTY	IMAGE
1	Left basket	1	
2	Sleeve 10/20 H-25	2	







**BISON GEAR**

3	Bolt M8x60 ISO 7380-2	2	
4	O-ring	2	

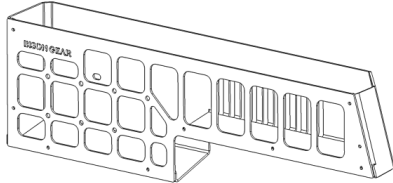

## Part list – Left basket with inverter cutouts

LP	PART	QTY	IMAGE
1	Left Basket	1	
2	Sleeve 10/20 H-25	2	
3	Bolt M8x60 ISO 7380-2	2	
4	O-ring	2	



## List of necessary tools<sup>1</sup>:


- 5 mm Allen Key (Hex)
- TX45 Torx Key

<sup>1</sup> The tools **are not** included in the set.



**BISON GEAR**

## Left Basket – Diagram

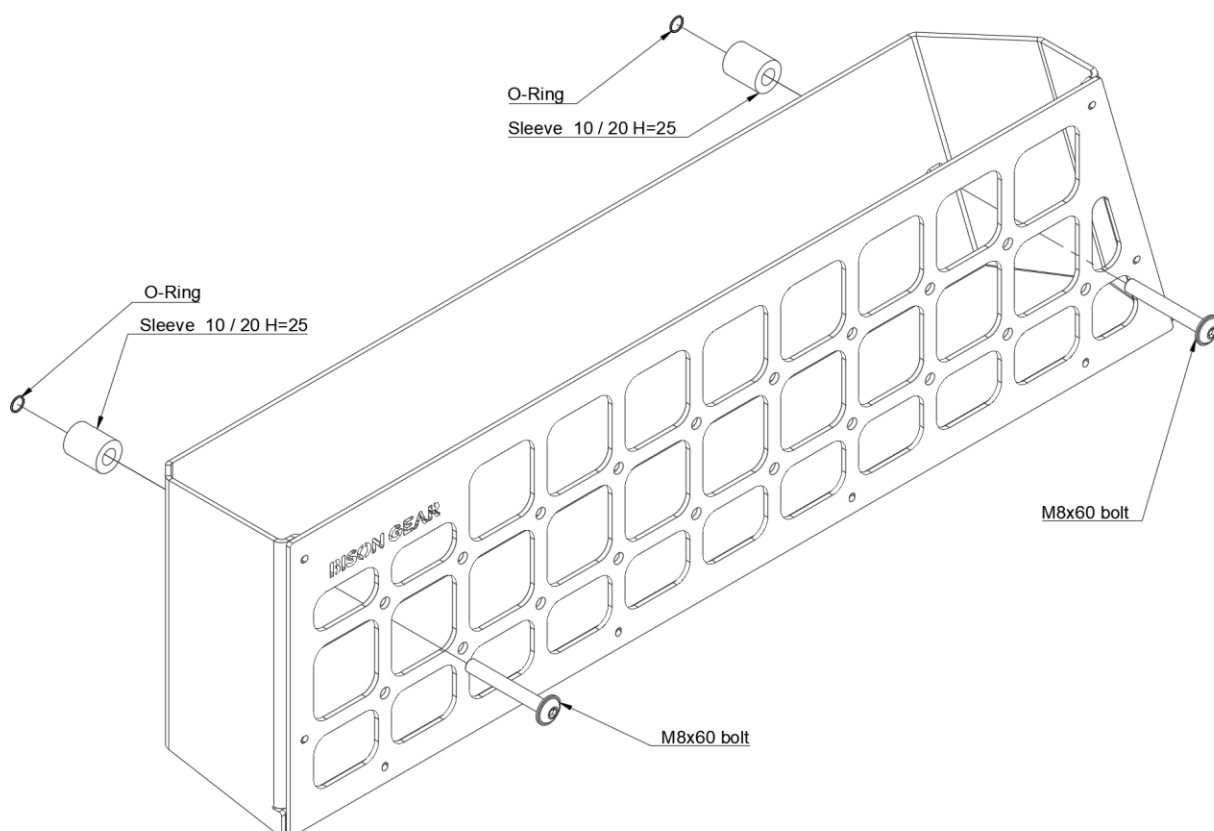



**BISON GEAR**

## Installation:

Before you start to work, familiarize with the **Basket Diagram** on **page 4**. There is an exploded view that shows you how to mount left basket parts together. The installation process for the right basket and left basket with inverter cutouts are the same as the left basket example.

Follow the steps below to install product correctly:

1. Start by preparing the product parts and gathering the necessary tools.
2. Remove both factory holders for the side where you will mount the basket. Use the TX45 torx key and unscrew the factory holder's bolt.



3. Insert the bolts in the basket mounting holes and place the sleeve on each bolt behind the basket. Place the O-Ring on the bolt behind the previously placed sleeve. The O-Ring prevents the sleeve from sliding off the bolt during installation process.
4. Place basket into the car and screw and tighten the bolts.

Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.

**After driving 50 km with your cargo basket, check all the bolts and re-tighten them if necessary.**



**BISON GEAR**

**Have great time with the Bison Gear products!**



Email: [contact@bison-gear.com](mailto:contact@bison-gear.com)

Phone: **+48 505 642 981**