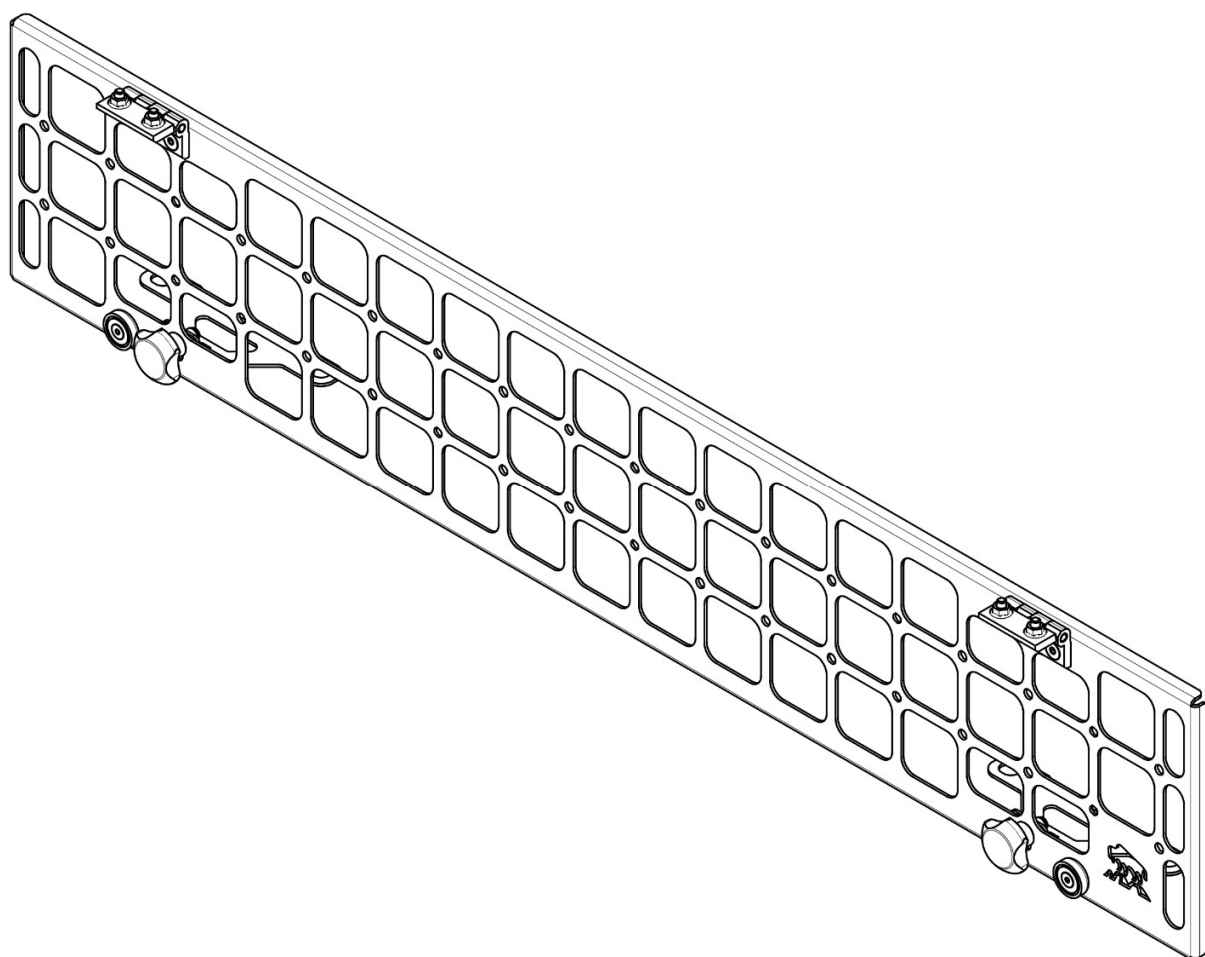




BISON GEAR

TOYOTA FJ CRUISER MOVABLE CARGO BARRIER INSTALLATION GUIDE

FJ-CARGO-ONLY



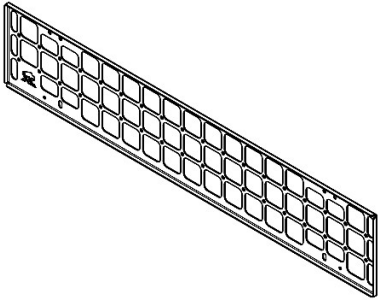
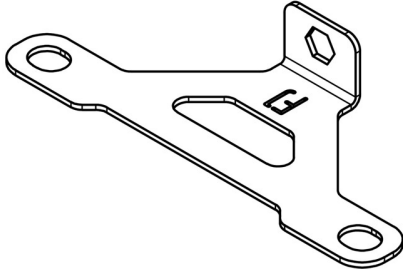
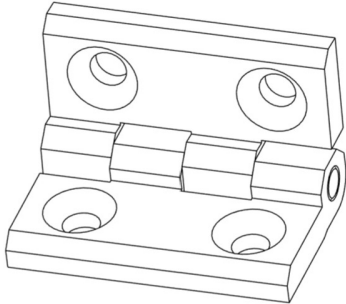


BISON GEAR

Before you start



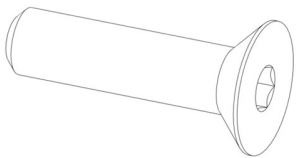

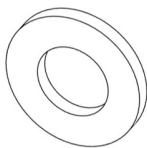
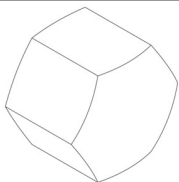
The installation requires the **Bison Gear Roof Shelf** to be installed first. Familiarize yourself with these instructions. The Cargo Barrier is shipped in one parcel. Ensure that all listed parts and hardware are present in the package.

Part list

LP	PART	QTY	IMAGE
1	Barrier	1	
2	Headrest bracket	2	
3	Hinge	2	



BISON GEAR

4	Magnet	2	
5	Knob	2	
6	M6x16 Screw DIN 7991	8	
7	M6 Flange nut	8	
8	M5x16 Screw DIN 7991	2	
9	M5 Washer DIN 125	2	
10	M5 Blind nut DIN 917	2	

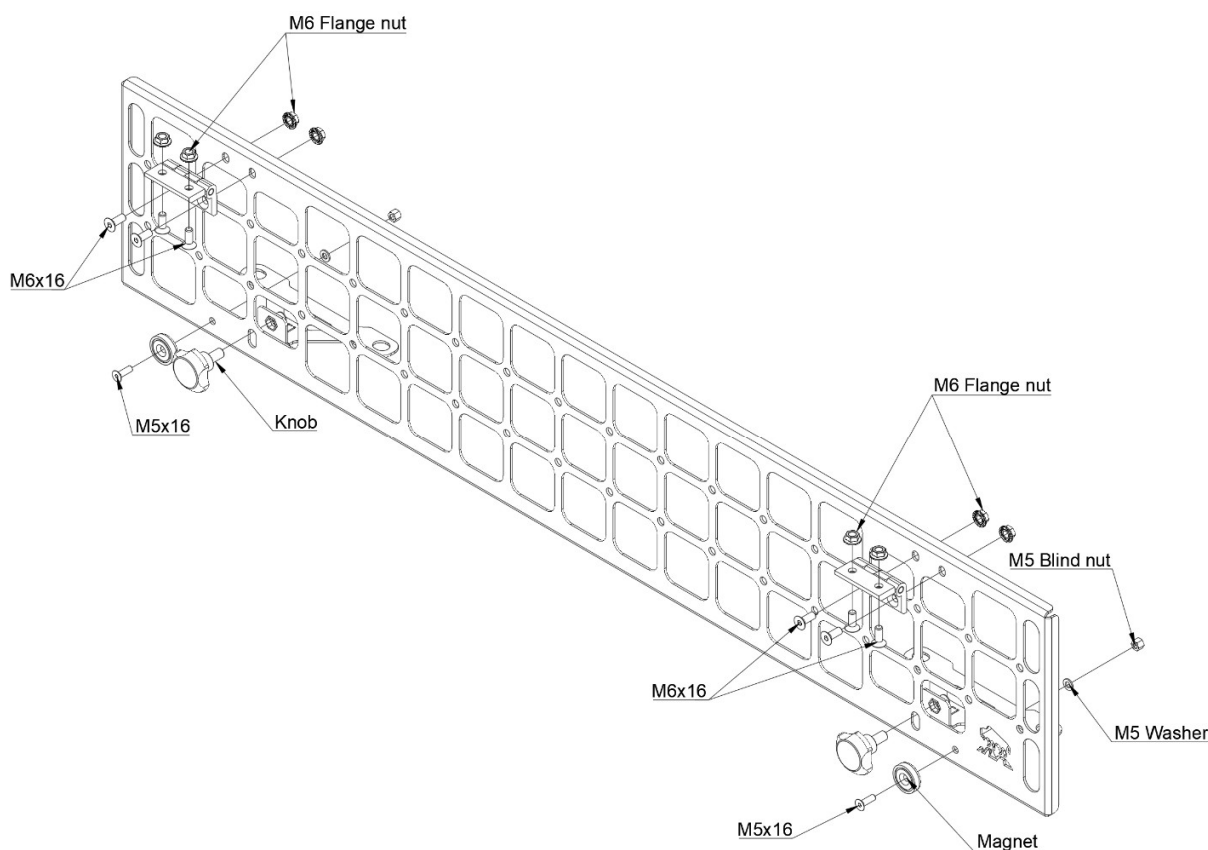


BISON GEAR

List of necessary tools¹:

- 3 mm Allen Key (Hex)
- 4 mm Allen Key (Hex)
- 8 mm wrench
- 10 mm wrench

Cargo Barrier Diagram



¹ NOTE: The tools **are not** the part of the set.
bison-gear.com



BISON GEAR

Installation:

Before you start to work, familiarize yourself with the **Cargo Barrier Diagram** on **page 4**. Follow the steps below to install the cargo barrier correctly:

1. Install the **magnets** using **M5x16 screws** and **M5 blind nuts**. (Sometimes the magnets are already screwed to the cargo barrier, and you do not have to do it).
2. Pre-screw the **hinges** to the barrier using **M6x16 bolts** and **M6 nuts**.
3. Remove the **second-row headrests** and put the **headrest brackets** on them (put the rods into the bracket's holes) and reinstall it.

In the next step you will need assistance of **one other person** who will hold the cargo barrier during the mounting process.

4. Put the **cargo barrier** inside the car and screw it to the Bison Gear's Roof Shelf using **M6x16 screws** and **flange nuts** (you have a choice of 3 possible mounting points – 3 sets of oblong holes)
5. Screw the **knobs** into the **headrest bracket**.
6. Regulate the vertical and horizontal position of the shelf (along the oblong holes) and screw **all the bolts**.

Make sure that everything is mounted properly, and all the bolts are tightened. If everything is correct, your work is done.

After driving 50km, check all the bolts and re-tighten them if necessary.



BISON GEAR

Have a great time with the Bison Gear product!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**