


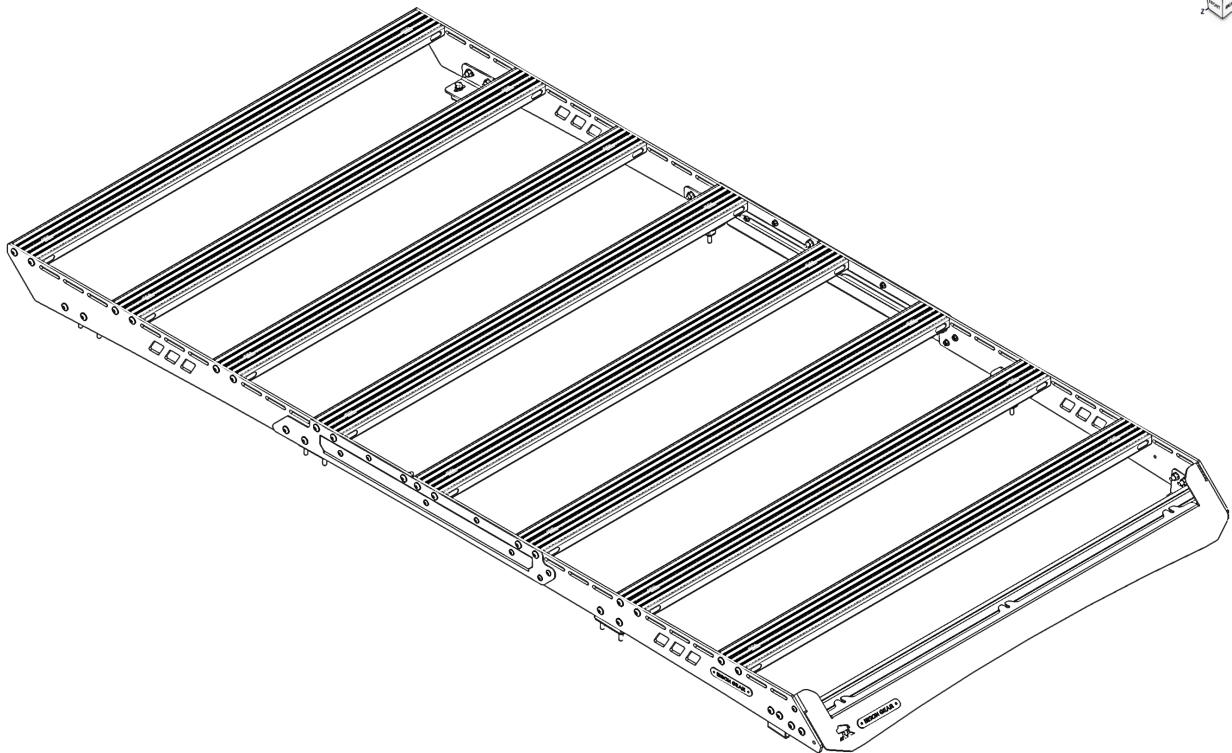

BISON GEAR

Toyota Land Cruiser 250 Lexus GX550 Roof Rack - LED Installation Guide

RR-GX550-OX-LED









BISON GEAR

Before you start






Familiarize yourself with these instructions. Ensure that all listed parts and hardware are present in package. Locate a flat surface or floor with a minimum area of **3 x 2.5 meters**. Gather the required tools. The installation requires two adult people.

Part list

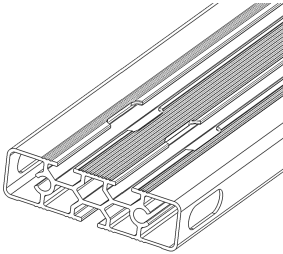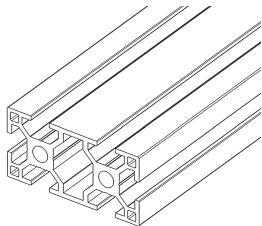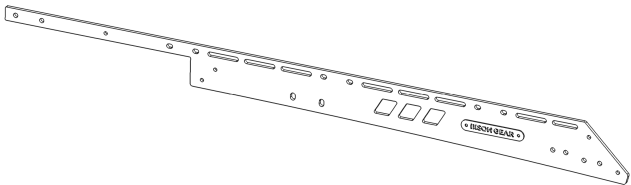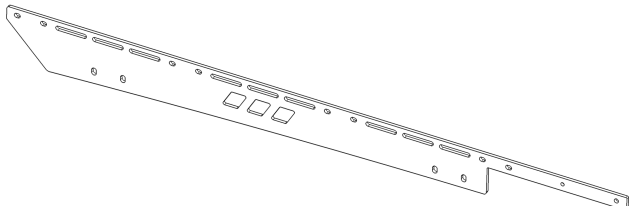No.	PART	QTY	IMAGE	<input checked="" type="checkbox"/>
1	Profile 90x25 L=1180	8		
2	Profile 60x30 L=1180	1		
3	Front rail L + R	2		
4	Back rail	2		








BISON GEAR

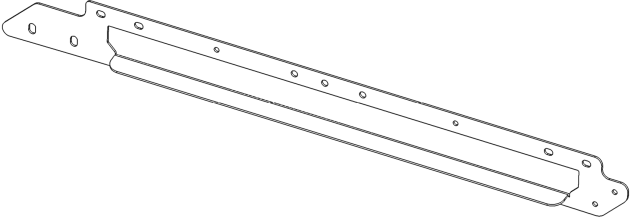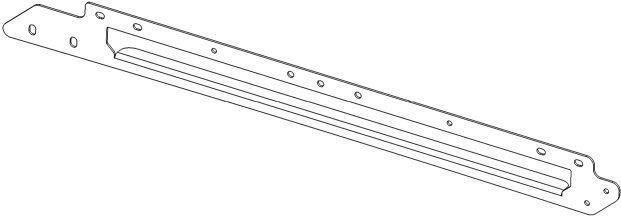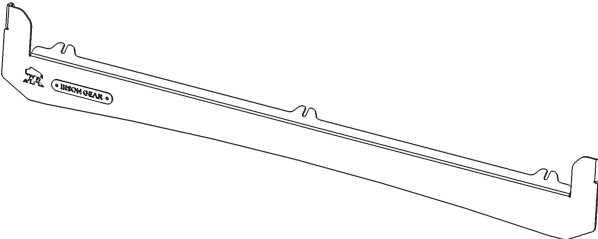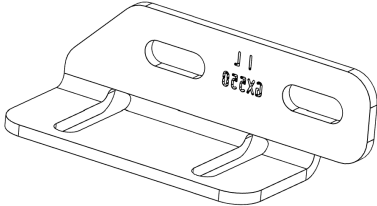
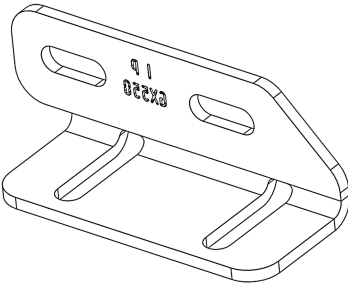




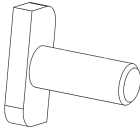
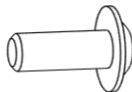
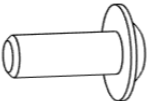
5	Overlayer L	1		
6	Overlayer R	1		
7	Wind deflector	1		
8	Roof bracket L	2		
9	Roof bracket R	2		

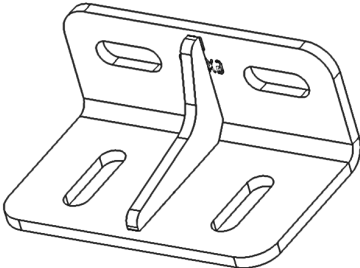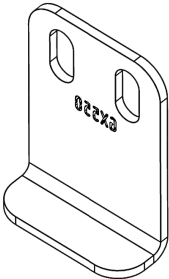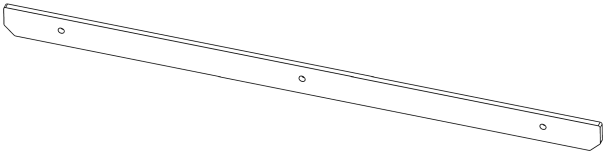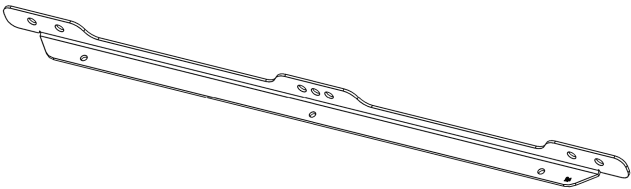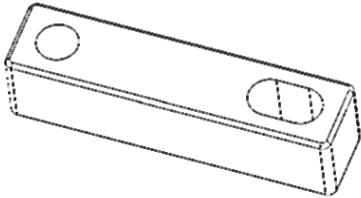

BISON GEAR





10	Back roof bracket	2		
11	Front suport	2		
12	Railing gap cover	2		
13	Support bracket	2		
14	Roof spacer H=20	6		

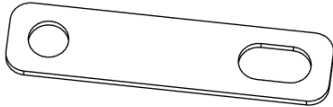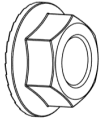

15	Rubber pad	6		
16	Flange nut M6 DIN 6923	16		
17	T-slot M6 nut	5	 or	
18	Flange nut M8 DIN 6923	24		
19	Flat washer M8 DIN 125	12		
20	Spring washer M8 DIN 127	12		
21	T-Slot M8x20 bolt	6		
22	Bolt M6x12 ISO 7380-2	5		
23	Bolt M6x16 ISO 7380-2	16		



BISON GEAR

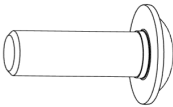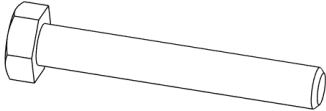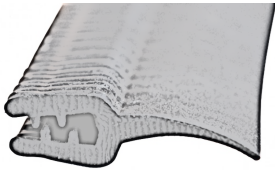24	Bolt M8x25 ISO 7380-2	54		
25	Bolt M8x55 DIN 933	12		
26	Rubber wind deflector gasket	1.2 m		
27	Protection tape	1.4 m		


List of necessary tools¹:

- 5 mm Allen Key (Hex)
- 4 mm Allen Key (Hex)
- 10 mm wrench
- 13 mm wrench

¹ NOTE: The tools **are not** included in the set.



BISON GEAR

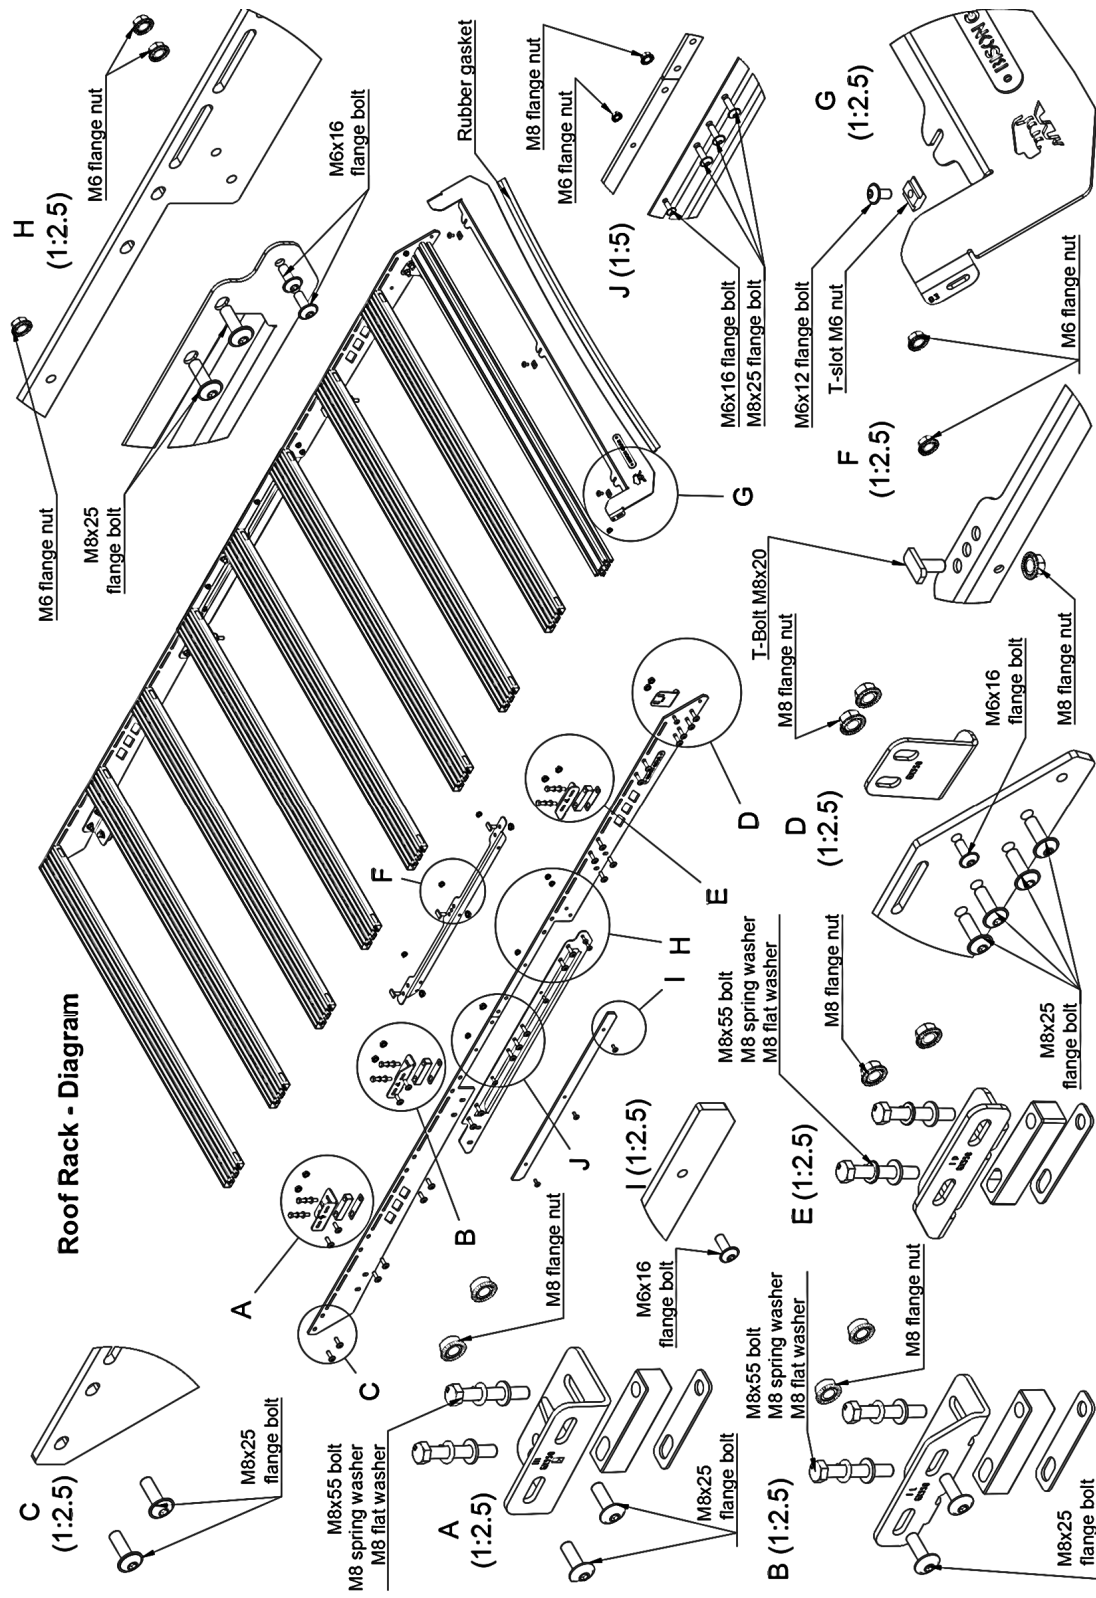



BISON GEAR

Installation:

Before you start to work, familiarize with the **Roof Rack Diagram** on **page 7**. There is an exploded view that shows you how to mount the roof rack parts together.

The roof rack is prepared for 42" led bar mount (the set contains additional crossbar and T-slot M6 nut and M6x12 flange bolts).


Follow the steps below to install product correctly:

1. Start by preparing the product parts and gathering the necessary tools.
2. Place and trim if necessary the **rubber gasket** on the wind deflector.
3. Assemble the **overlayers** and **rails** together using **M6x16** bolts and **M6 flange nuts**. (Assemble the left and the right side of the roof rack).
4. Assemble the **previously prepared side parts of the roof rack and crossbars** together on the ground or other flat space using **M8x25 bolts**. The third and fifth (looking on the front of roof rack) 90x25 crossbars should be installed with the two-slot side down. (**Tip:** Slide three **T-slot M6 nuts** to the first slot in the 60x30 profile before you screw it to the rails.)
5. Install the wind deflector to the rack using **M6x16 bolts, M6 nuts, T-slot M6 nuts and M6x12 bolts**.
6. Make sure that rails are straight and tighten the bolts.
7. Slide the **T-Bolts** into the **3rd, 4th, 5th 90x25 crossbar**, place the **support bracket** and pre-screw it using **M8 flange nuts**.



BISON GEAR

8. Place and screw the railing gap cover to the support bracket using **M6x16 bolts** and **M6 nuts**.
9. Face the **railing gap covers** with the overlayers and tighten **M8 nuts**.
10. *** If You have on the roof some items like – railings, roof rack or other items, you need to remove them off before starts mounting the roof rack.
11. Pre-screw 6 brackets (**2 x roof brackets L**, **2 x roof brackets R**, **2 x back brackets**) to the construction using **M8x25 bolts** and **M8 nuts**.

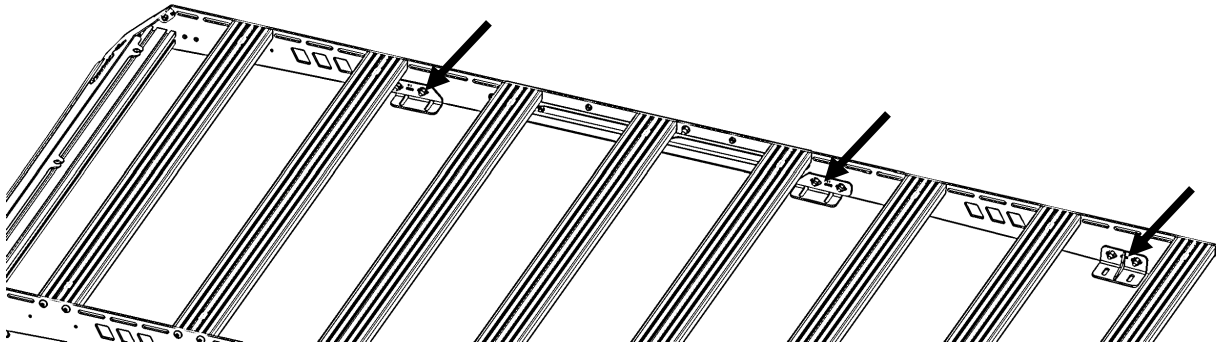

(Picture illustrate the right side of the roof rack, the left side is a mirror view)

12. In the next step you must have assist of **minimum one adult person** who help you put the whole construction on the roof. Before you start, prepare **6 x rubber pads**, **5 x roof spacers** and set of fasteners (**M8x55 bolts**, **flat washers** and **spring washers**).
13. Clean the surrounding of the fixing points. Place the **rubber pads** and **spacers** on the roof and place the roof rack on its.



! Important

The set includes the protective tape. We recommend to glue the protective tape where the rubber gasket of wind deflector and car's roof meets. This will prevent damage of paintwork at the point of contact.

14. (OPTIONAL) Mark the position of protective tape. Lift the front of the rack and glue the tape under wind deflector rubber gasket.
15. Pre-screw the roof rack to the car using **M8x55 bolts, flat washers, spring washers.**
16. Adjust the position of the roof rack – it should be on the center of the car.
17. Tighten **all the bolts.**

The last part to screw to the roof rack is a front support bracket. You can do it in two ways – 18.A, 18.B (both are correct)

18.A Remove the **rubber cover** which is directly under the place where front support will be. Clean the place where the front support meets with the car. Remove the **tape protection layer** from front support. Glue the front support to the car and screw it to the roof rack using **M8x25 bolt** and **M8 nuts.**



BISON GEAR

18.B Clean the part of the **rubber cover** where the front support meets. Remove the tape protection layer from front support. Glue the **front support** on the rubber cover, push it down and screw it to the roof rack using **M8x25 bolt** and **M8 nuts**.

19. Tighten the **front support bolts** and **nuts**.

Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.

After driving 50km with rack on the roof, check all the bolts and retighten them if necessary.



BISON GEAR

Have a great time with Bison Gear product!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**