




BISON GEAR

Ford Bronco 6G 2-Door Roof Shelf Installation Guide

SH-BRN-6G2D

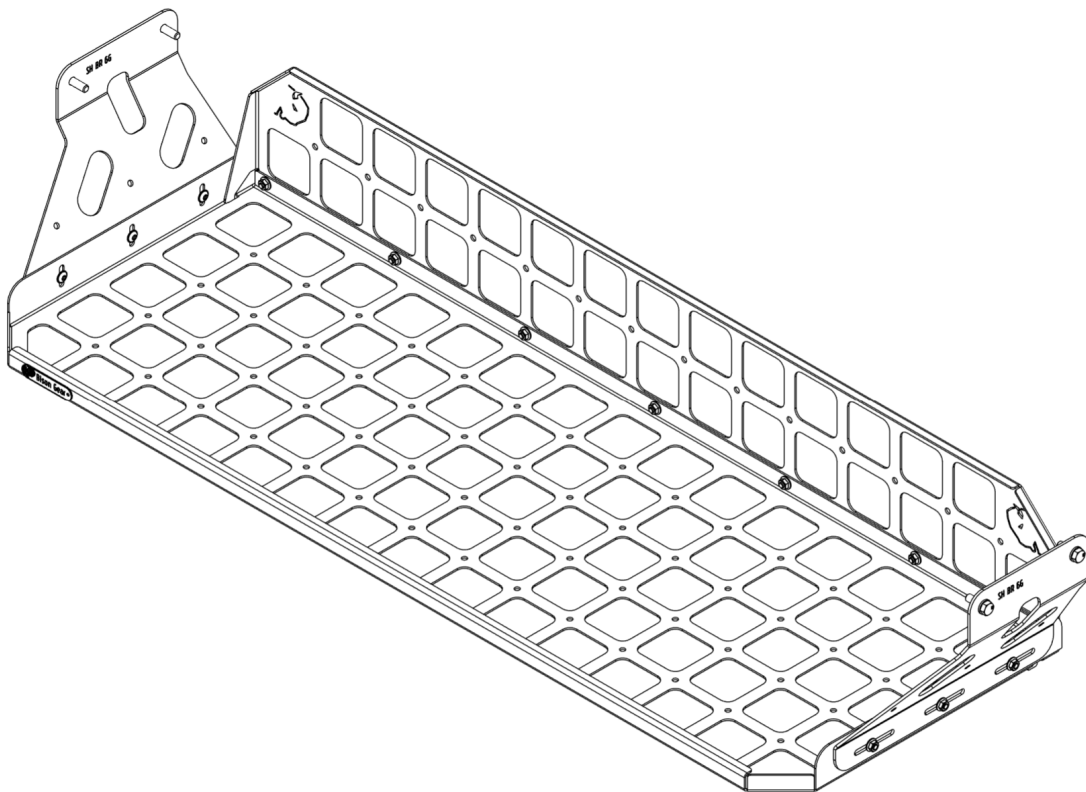

Before you start



Familiarize yourself with these instructions. The shelf is shipped in one package. Ensure that all listed parts and hardware are present.

Locate a flat surface or floor with a minimum area of **1 x 1.5 meters**. Gather the required tools. The installation will necessitate the assistance of one adult.








BISON GEAR


Part list
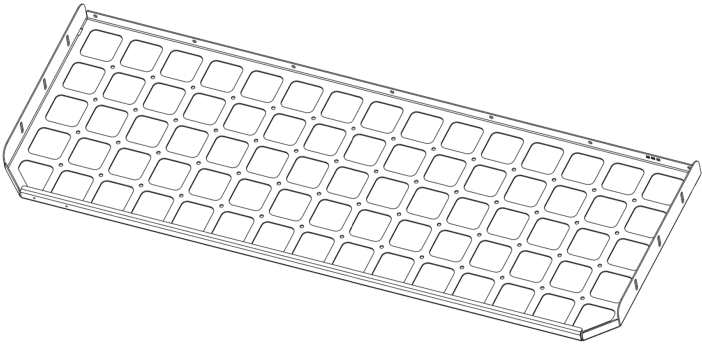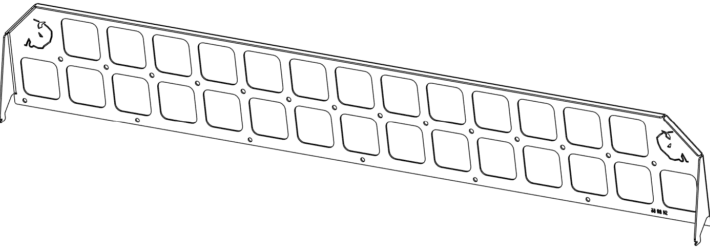
| LP | PART | QTY | IMAGE |
|----|-------------|-----|--|
| 1 | Shelf | 1 |  |
| 2 | Front panel | 1 |  |

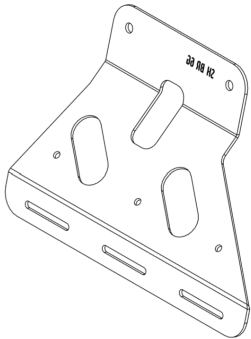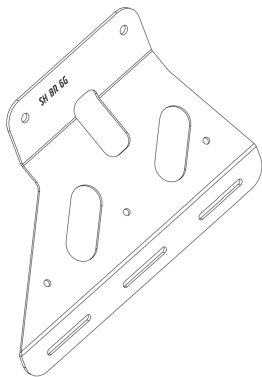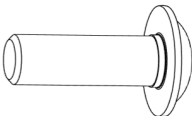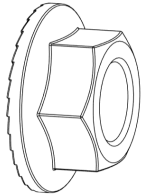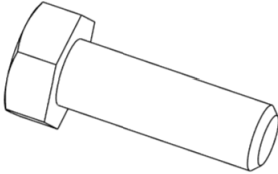

| | | | |
|---|------------------------------------|----|--|
| 3 | Right bracket | 1 |  |
| 4 | Left bracket | 1 |  |
| 5 | Flange bolt M6x12 ISO 7380-2 | 13 |  |
| 6 | Flange nut M6 DIN 6923 | 13 |  |
| 7 | Bolt M8x25 DIN 933 | 4 |  |

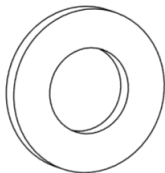

| | | | |
|---|---------------------------|---|--|
| 8 | Flat washer M8 DIN 125 | 4 |  |
|---|---------------------------|---|--|

List of necessary tools¹:


- 4 mm Allen Key (Hex)
- 10 mm wrench
- 13 mm wrench

¹ The tools **are not** the part of the set.



BISON GEAR

Roof Shelf Diagram

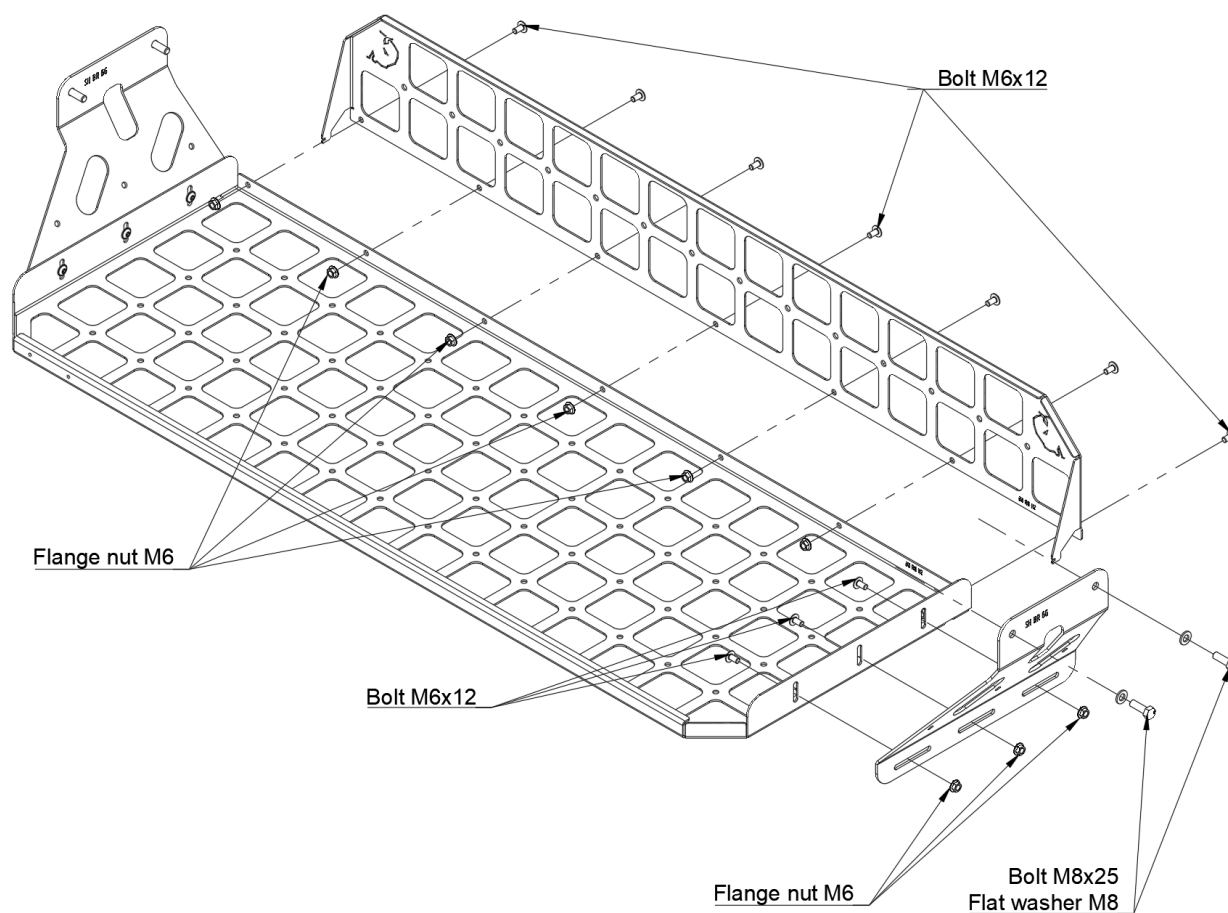




Installation:

Before you start to work familiarize with the **Roof Shelf Diagram** on **page 5**. There is an exploded view that shows you how to install the roof shelf part together. Follow the steps below to mount the product correctly.

1. Assemble **the shelf** and **front barrier** together on the ground or other flat space using **M6x12 bolts** and **M6 flange nuts**.
2. Pre-screw the left and right bracket using **M8x25 bolt** and **flat washer** (photo below).

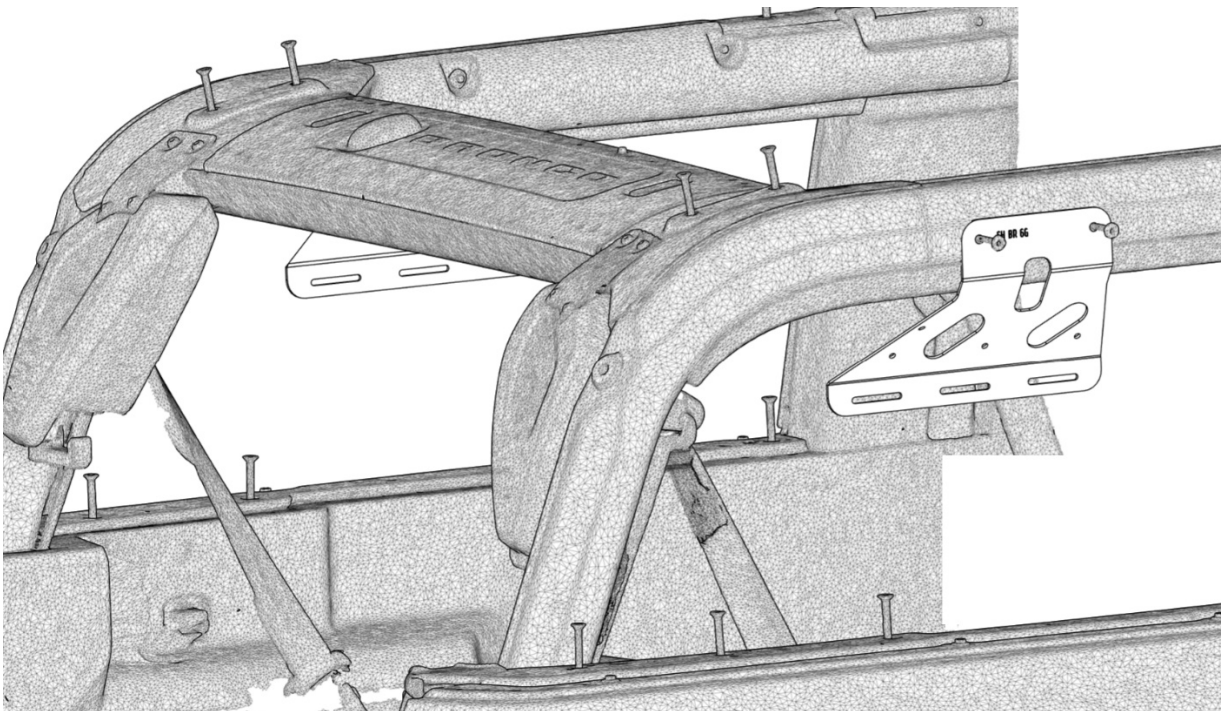



BISON GEAR

In the next step you must have assist of one adult person who will hold the shelf during the installation.

3. Put the shelf to the car between the brackets and screw using **M6x12 bolts** and **flange nuts**.
4. Regulate the vertical and horizontal position of the shelf and screw **all the bolts**.

Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.

After driving 50km, check all the bolts and retighten them if necessary.

Have a great time with Bison Gear products!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**