




**BISON GEAR**

# UNDER THE SHELF COMPARTMENT INSTALLATION GUIDE

**SH-DR FR**

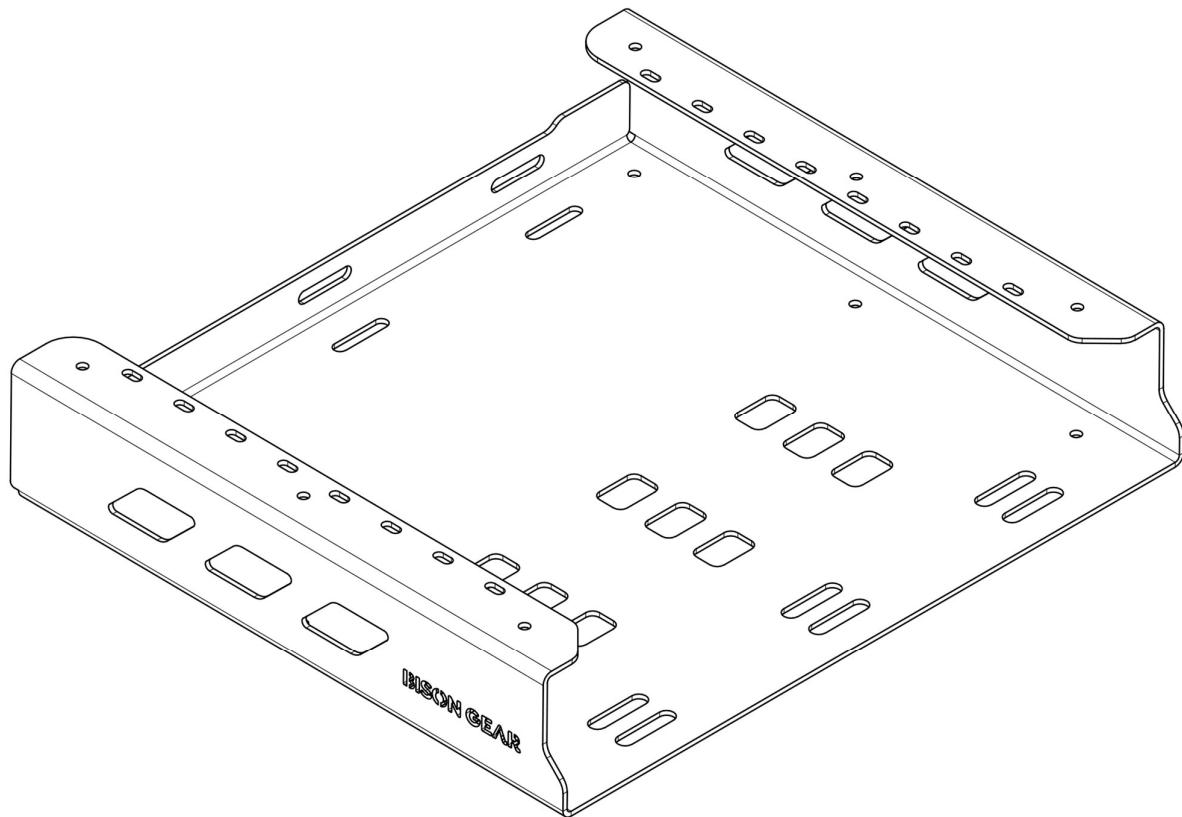



## 💡 Before you start

Familiarize yourself with these instructions. The Under The Shelf Compartment is shipped in one parcel. Ensure that all listed parts and hardware are present in the package.

## ⚙️ Part list

No.	PART	QTY	IMAGE	
1	Compartment	1		<input checked="" type="checkbox"/>
2	M6 Flange nut DIN 6923	6		<input type="checkbox"/>
3	M6x12 Flange bolt ISO 7380-2	6		<input type="checkbox"/>
4	Hook	1		<input type="checkbox"/>
5	Rubber cord	0.5 m		<input type="checkbox"/>




## ☒ List of necessary tools<sup>1</sup>:

- **4 mm Allen Key (Hex)**
- **10 mm wrench**

## ☒ Torque settings:

During assembly, use the recommended tightening torques for screw, unless other parameters are specified for a given connection.

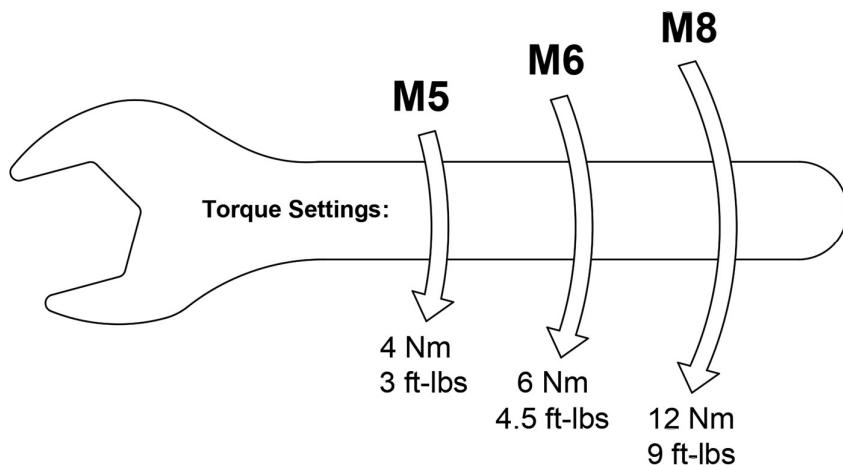


<sup>1</sup> NOTE: The tools **are not** the part of the set.



## ⚙️ Installation:

Follow the steps below to install the product correctly:



1. Start by preparing all the parts and gathering the necessary tools.
2. Attach the compartment to the roof shelf using at least 4 M6 bolts and nuts. Depending on your shelf, use either round or oblong holes located on the top part of the compartment. Refer to the picture below.

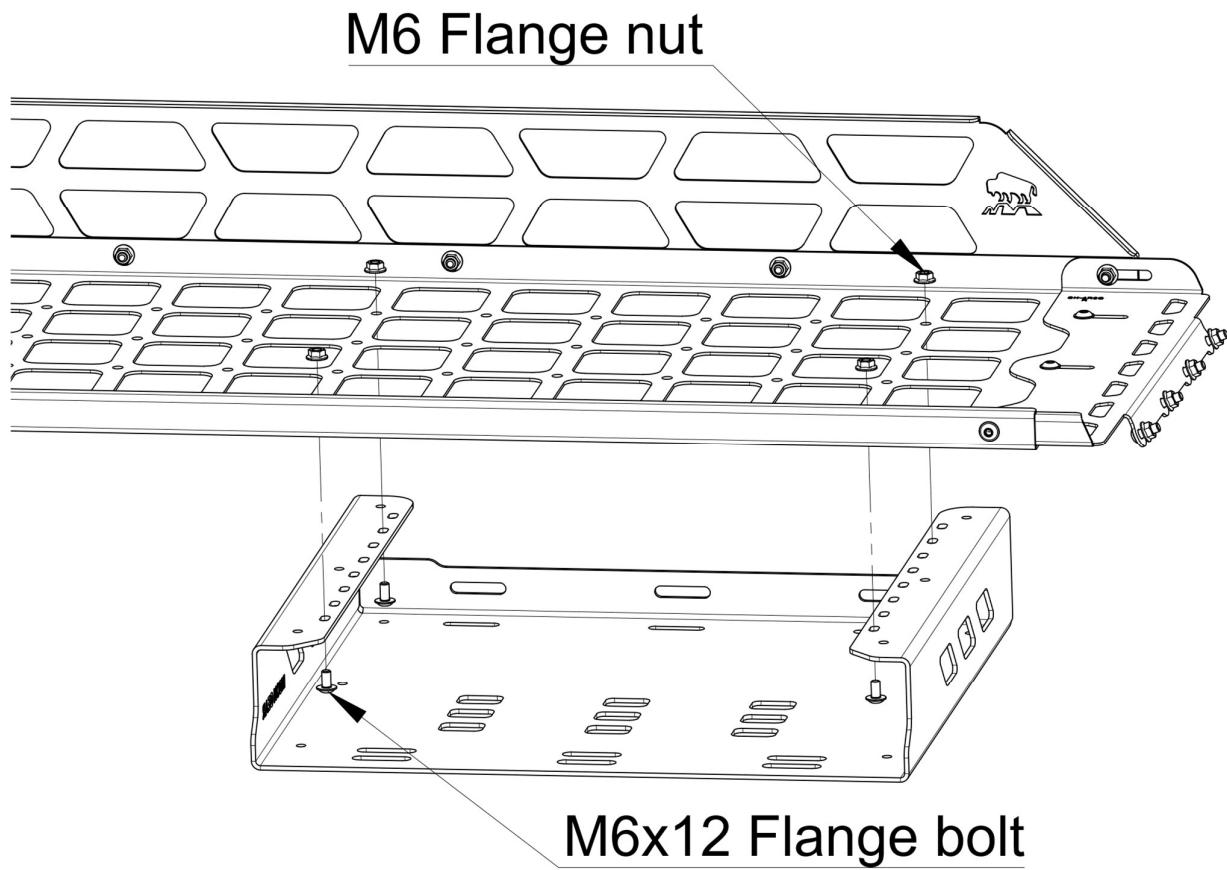



**BISON GEAR**

3. Pass the cord through the hook and then through the base of the shelf and tie it tightly. Refer to the pictures below

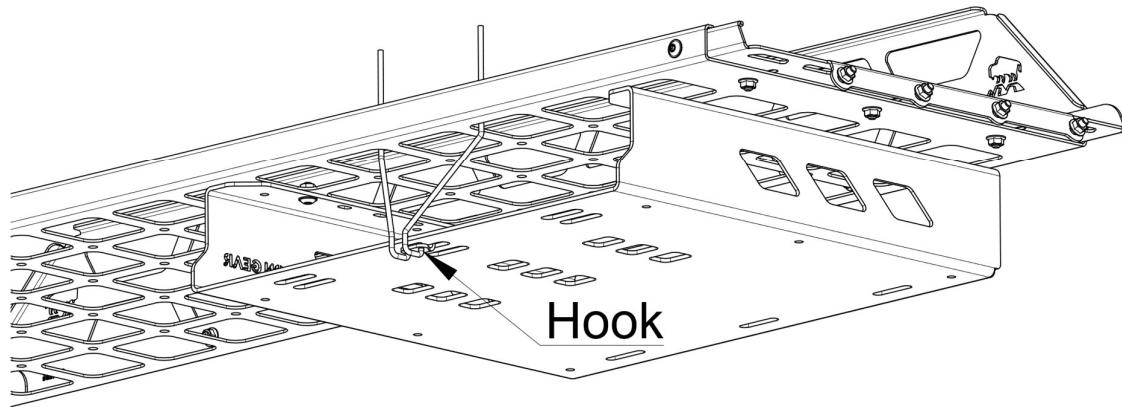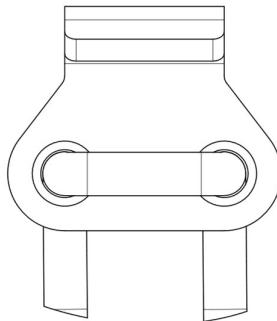

Ensure that everything is mounted correctly and all bolts are tightened. If everything is in place, your installation is complete.

**After driving 50 km, check all the bolts and retighten them if necessary.**



**BISON GEAR**

**Have a great time with Bison Gear product!**



Email: [contact@bison-gear.com](mailto:contact@bison-gear.com)

Phone: **+48 505 642 981**