




BISON GEAR

Universal Under-Shelf Net

Installation guide

SK-NET-UNI

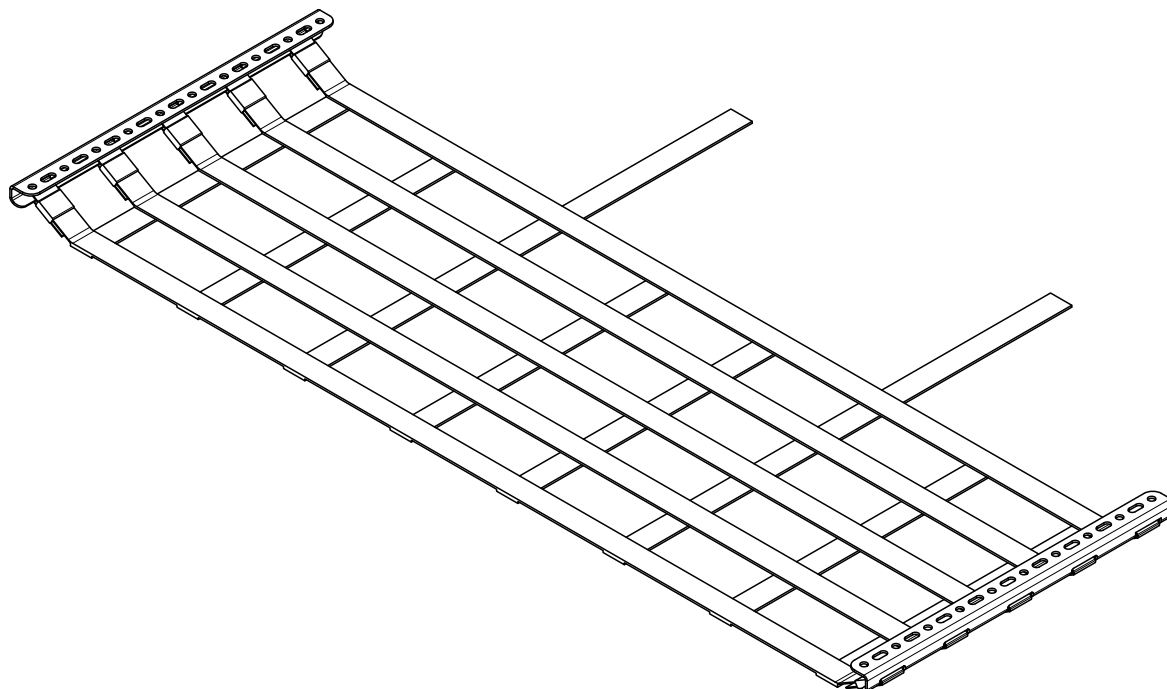






BISON GEAR

Before you start

Before installation:

- Familiarize yourself with these instructions.
- Ensure that all listed parts and hardware are included in the package.
- Gather the required tool.

Part list

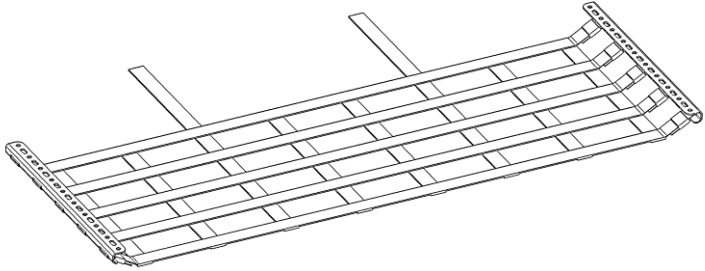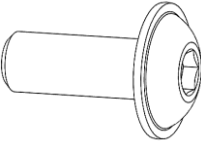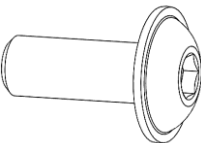LP	PART	QTY	IMAGE
1	Net with mounts	1	
2	Plastic regulator	2	
3	Flange nut M6 DIN 6923	4	
4	Flange bolt M6x12 ISO 7380-2	4	
5	Flange bolt M6x16 ISO 7380-2	4	




BISON GEAR

✂ List of necessary tools¹:

- 4 mm Allen Key (Hex)
- 10 mm wrench

✂ Torque settings:

During assembly, use the recommended tightening torques for screw, unless other parameters are specified for a given connection.

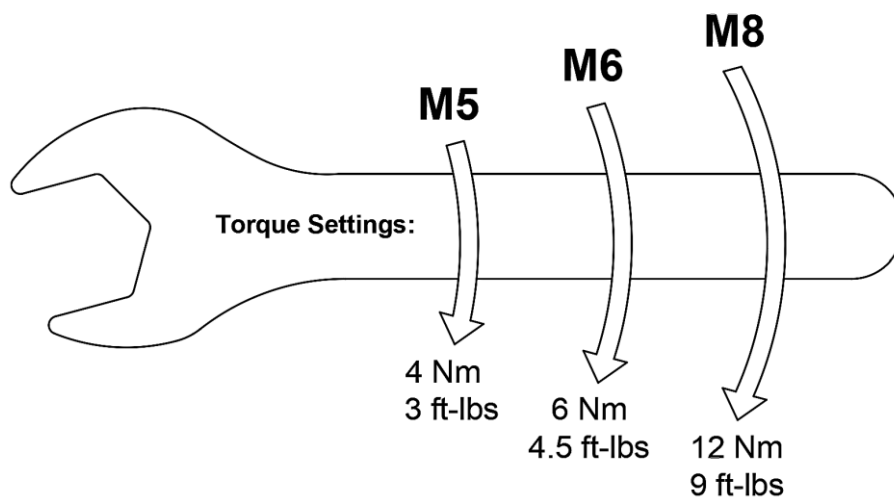

¹ NOTE: The tools **are not** the part of the set.
bison-gear.com



Installation:

The product enables you to change a common car storage compartment into a useful storage space. The installation process is fast and simple, no drilling is needed.

Follow the steps below to install product correctly:

1. Start by preparing the product parts and gathering the necessary tools.
2. Before you start screwing the net to the shelf, try some configurations and choose the best one for you.

There is no preset mounting point — the position of the net should be comfortable and practical for you. The shelf and net holder have so many installation holes that you will surely find the best position for you.


The net also has some width adjustment, but keep in mind it is only a few centimeters.

Here are some recommendations — the net should have two free straps mounted to the front of the vehicle and must be fastened with at least 4 bolts.



BISON GEAR

3. Once you have chosen the best position for your net, fasten it using M6 bolts (the kit contains M6x12 and M6x16 bolts — use whichever suits you best) and M6 flange nuts. Then adjust the width of the net.

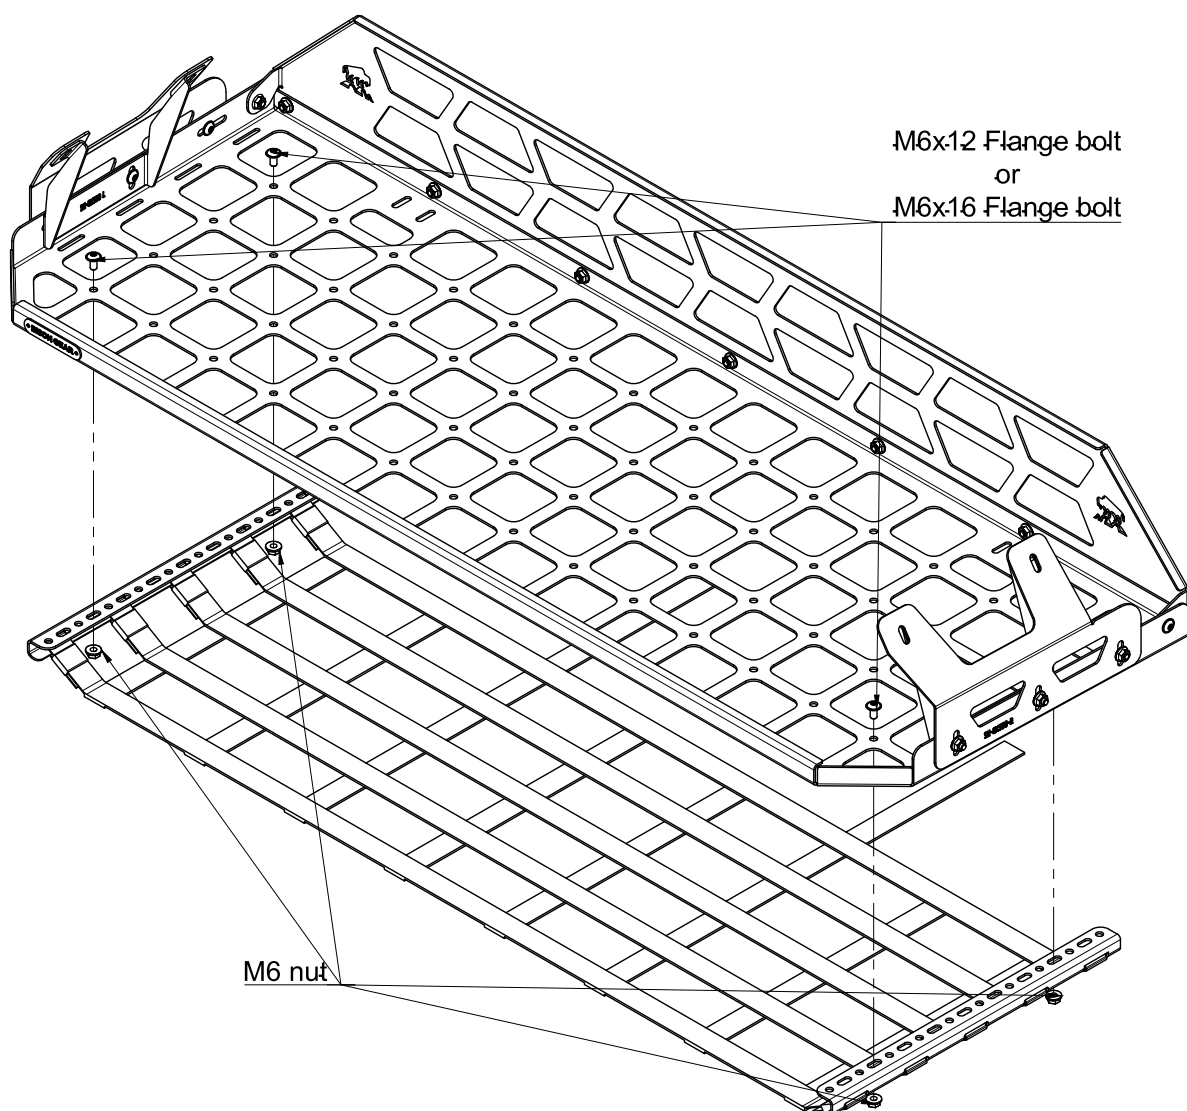




4. Finally, attach the two front straps to the shelf or cut them off if they are not needed (think twice before cutting the straps).


Sometimes the plastic is just preassembled on the free stripes.

There are two installation methods for the front straps:

- a. If the net is mounted close to the front of the shelf (towards the front of the car), attach the strap to the front panel and shelf corner.

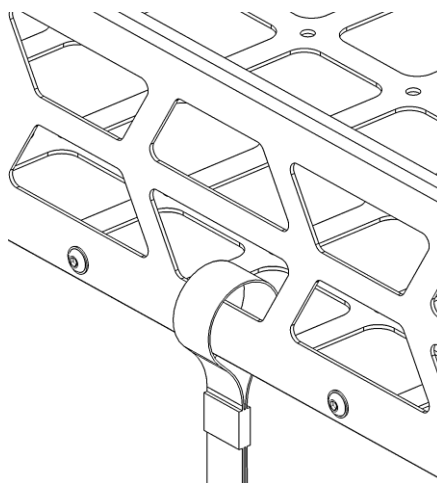

- b. If the net is mounted at the back of the shelf, attach the strap to the shelf's perforation rib.

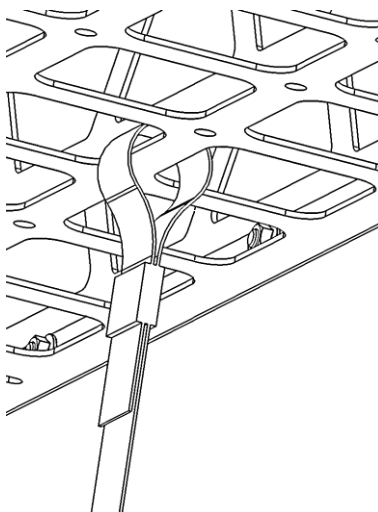

Both methods are correct and it depends on the installation depth.

The connection between the plastic regulator and strap should be the same as on the pre-assembled sides.



BISON GEAR

Make sure that everything is mounted properly, and all the bolts are tightened. If everything is correct, your work is done.

After driving 50km, check all the bolts and retighten them if necessary.



BISON GEAR

Have a great time with Bison Gear products!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**