


# Tilted fridge slider Installation giude

SL....-TILT

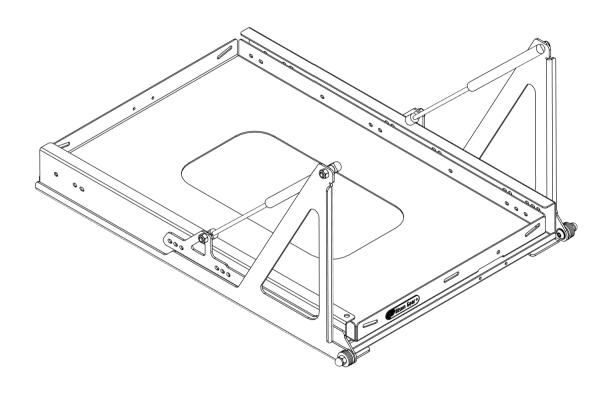

## Before you start

Familiarize yourself with these instructions. Ensure that all listed parts and hardware are present in package. Gather the required tools.



The installation kit do not contains fasteners for installation to the car. This is due to the excessive number of mounting options found in cars. You have to choose the best installation method for you and buy the fasteners.

### Part list – SL...-TILT

LP	PART	QTY	IMAGE
1	Slider	1	
2	Left holder	1	




3	Right holder	1	
4	Gas strut	2	

## X List of necessary tools:

- 5 mm Allen Key (Hex)
- 13 mm wrench



#### Slide diagram

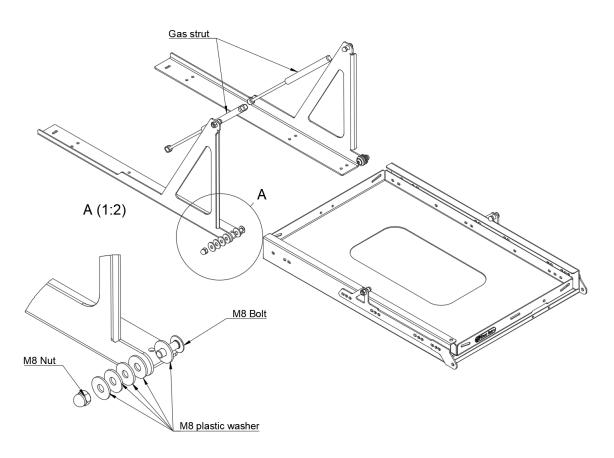

## Installation:

Before you starts to work familiarize with upper diagram. There is an exploded view that shows you how to mount the tilted slider


The installation kit do not contains fasteners for installation to the car. This is due to the excessive number of mounting options found in cars. You have to choose the best installation method for you and buy the fasteners.

The right and left holder has 6mm diameter holes in his body which have to be used for installation to your car



Firstly, mount the left and right holder to your car. Inner distance between the holders should be between:

- SL-650-TILT 458 ÷ 470 mm
- SL-700-TILT 492 ÷ 504 mm
- SL-755-TILT 530 ÷ 542 mm

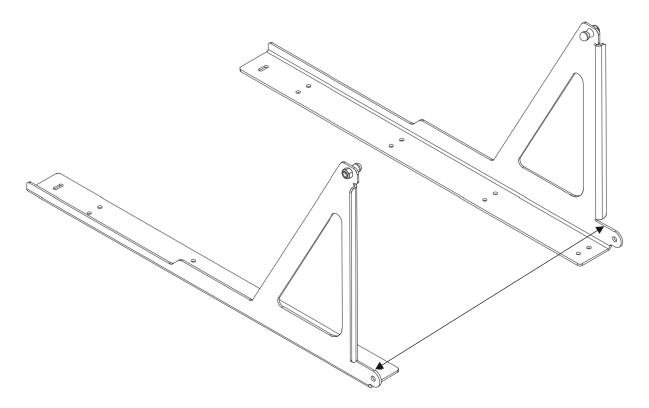

Next, put the slider between holders. Space between the holders and slider fill using M8 plastic washer (should be 1-4 plastic washer). Screw the bolts and tighten them till the slide can smoothly rotate.

The last things you have to mount are gas struts. To install it you have to push the sockets on the ball joints.

Make sure that everything is mounted properly and all the bolts are tighten. If it everything is correct, yours work is done. After first trip or 50km check all the bolts and retighten it if necessary.



#### Have a great time with Bison Gear products!



Email: contact@bison-gear.com

Phone: +48 505 642 981