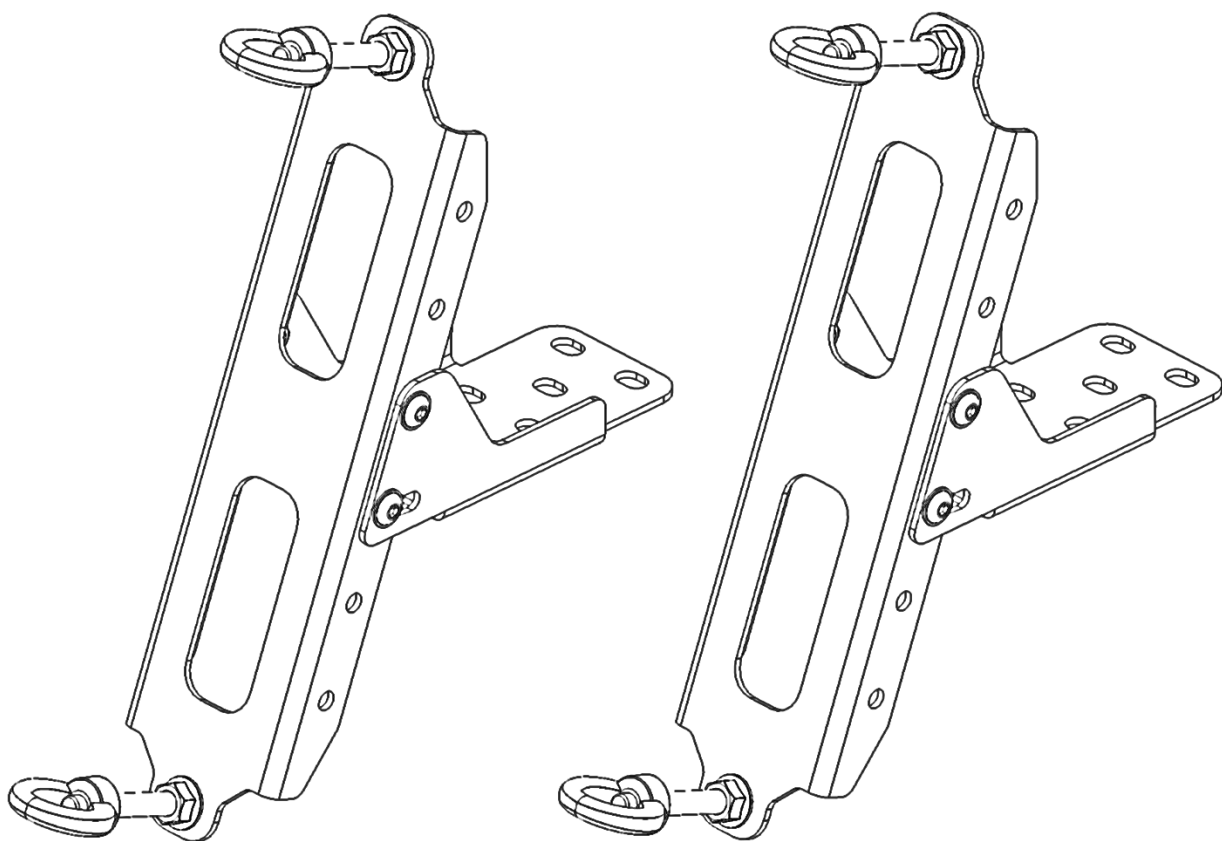




BISON GEAR

Traction board mount Installation Guide

TRM-MNT-01





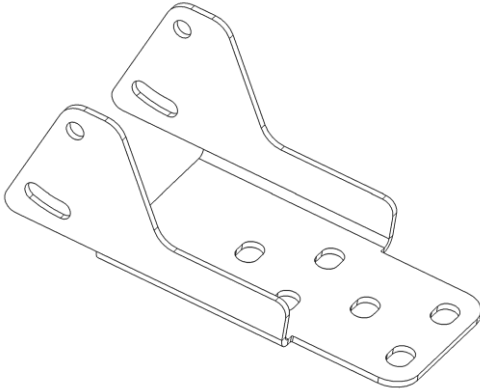
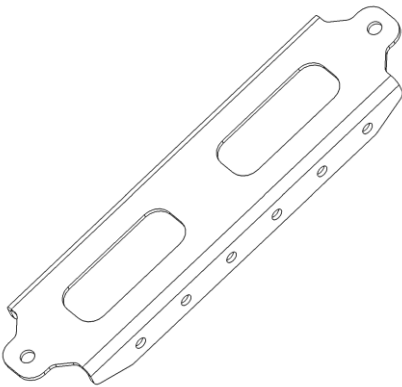
BISON GEAR

Before you start

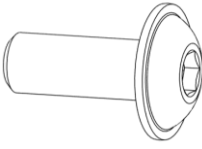
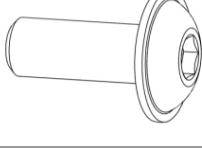
Before installation:

- Familiarize yourself with these instructions.
- Ensure that all listed parts and hardware are included in the package.
- Prepare a flat surface or floor with a minimum area of 1 x 1.5 meters.
- Gather the required tools.

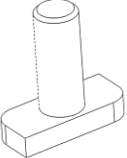
Part list

LP	PART	QTY	IMAGE
1	Base	2	
2	Mounting bracket	2	

**BISON GEAR**

3	Flange nut M6 DIN 6923	8	
4	Flange nut M8 DIN 6923	4	
5	Flange bolt M6x12 ISO 7380-2	8	
6	Flange bolt M8x60 ISO 7380-2	4	
7	Lifting eye nut M8	4	

Installation Kit

LP	PART	QTY	IMAGE
1	Flange nut M8 DIN 6923	4	
2	T-slot bolt M8x20 ISO 7380-2	4	



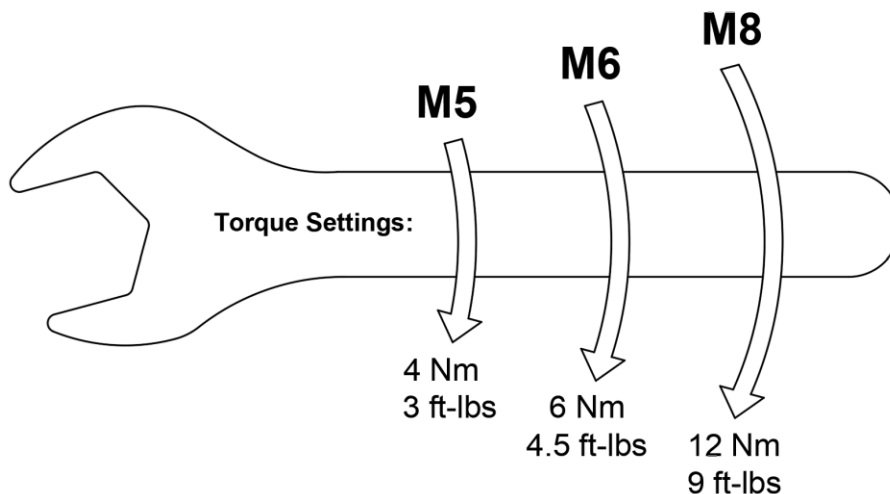
BISON GEAR

✂ List of necessary tools¹:

- 4 mm Allen Key (Hex)
- 5 mm Allen Key (Hex)
- 10 mm wrench
- 13 mm wrench

✂ Torque settings:

During assembly, use the recommended tightening torques for screw, unless other parameters are specified for a given connection.

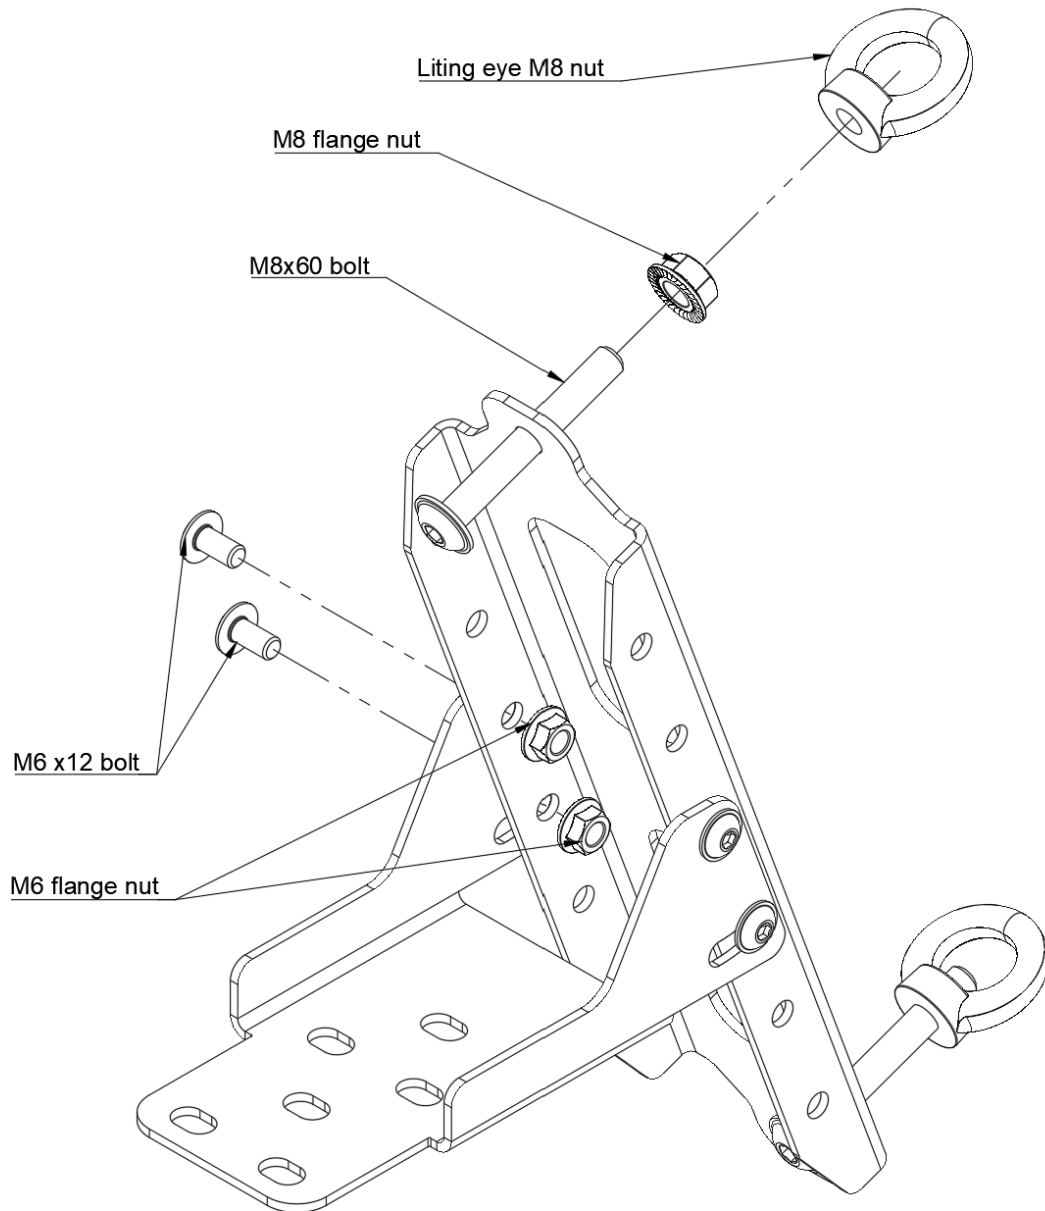


¹ NOTE: The tools **are not** the part of the set.
bison-gear.com



BISON GEAR

Diagram





BISON GEAR

Installation:

Before you start to work, familiarize yourself with the **Diagram** on **page 5**. There is an exploded view that shows you how to assemble the shelf parts together.

Follow the steps below to the product correctly:

1. Start by preparing all the parts and gathering the necessary tools.
2. Attach the base to the mounting bracket using **M6x12 bolts** and **M6 nuts**. Do not tighten the bolts until regulate the bracket on the roof rack.
3. Insert **the M8x60 bolts** through the mounting plates and secure each with an **M8 nut** on the opposite side and tighten the nut.
4. At the end screw the lifting eye nuts.

The set includes an installation kit with M8x20 T-slot bolts and M8 nuts for attaching the product to your roof rack. When you install the product on the roof rack tighten the side M6x12 - M6 nuts.

To mount the traction board on the bracket, unscrew the lifting eye nuts, place the board onto the bolts, and secure it with the lifting eye nuts.

Make sure that everything is mounted properly, and all the bolts are tightened. If everything is correct, your work is done.

After driving 50 km, check all the bolts and re-tighten them if necessary.



BISON GEAR

Have a great time with the Bison Gear product!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**