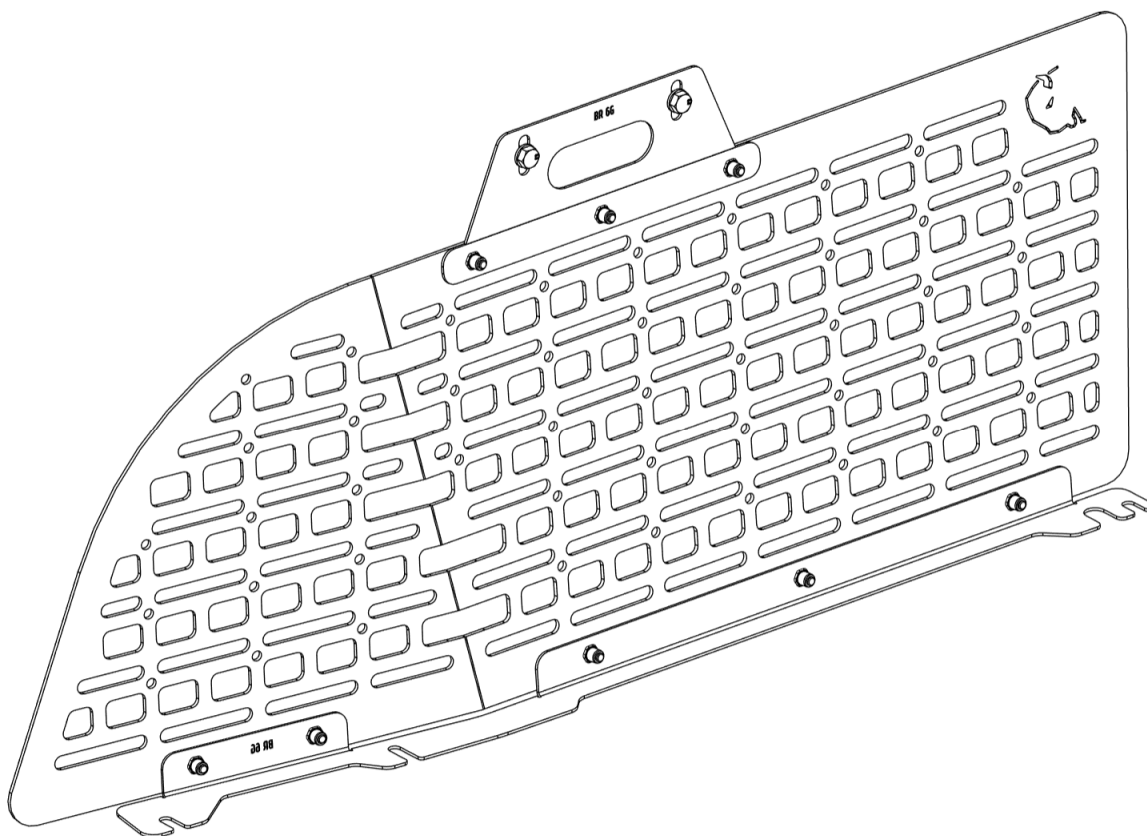




BISON GEAR

Ford Bronco 6G 2-Door Internal Molle Panel Installation Guide

WINPAN-BRN-6G2D-L; WINPAN-BRN-6G2D-R



Before you start

Familiarize yourself with these instructions. The Internal Molle Panel is shipped in one package. Ensure that all listed parts and hardware are present in package. Gather the required tools. The installation will necessitate one adult.



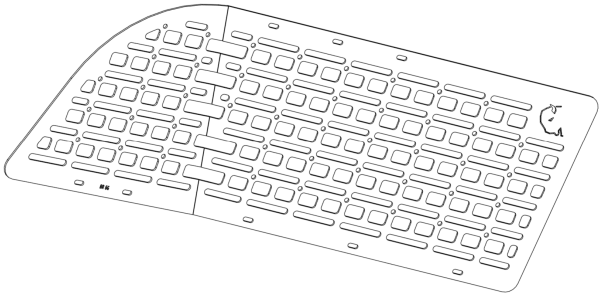

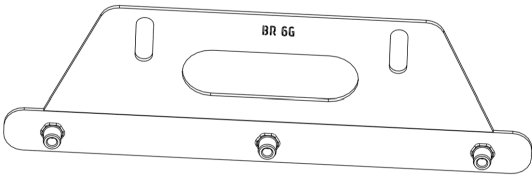
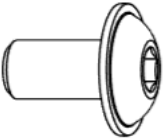

BISON GEAR



Part list – **Left panel**



WINPAN-BRN-6G2D-L

LP	PART	QTY	IMAGE
1	Left panel	1	
2	Left lower bracket	1	
3	Upper bracket	1	
6	Flange bolt M6x16 ISO 7380-2	8	
7	Hex bolt M8x25 DIN 933	2	



BISON GEAR

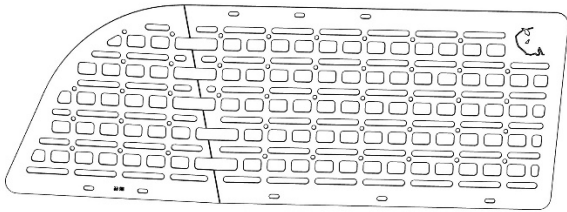

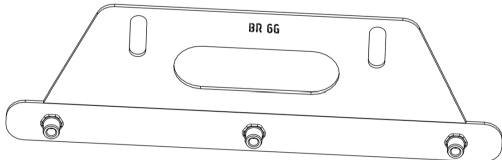
8	Flat washer M8 DIN 125	2	
----------	------------------------------	----------	--



Part list – **Right panel**

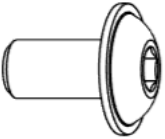




WINPAN-BRN-6G2D-R

LP	PART	QTY	IMAGE
1	Right panel	1	
2	Right lower bracket	1	
3	Upper bracket	1	



BISON GEAR

6	Flange bolt M6x16 ISO 7380-2	8	
7	Hex bolt M8x25 DIN 933	2	
8	Flat washer M8 DIN 125	2	

List of necessary tools¹:

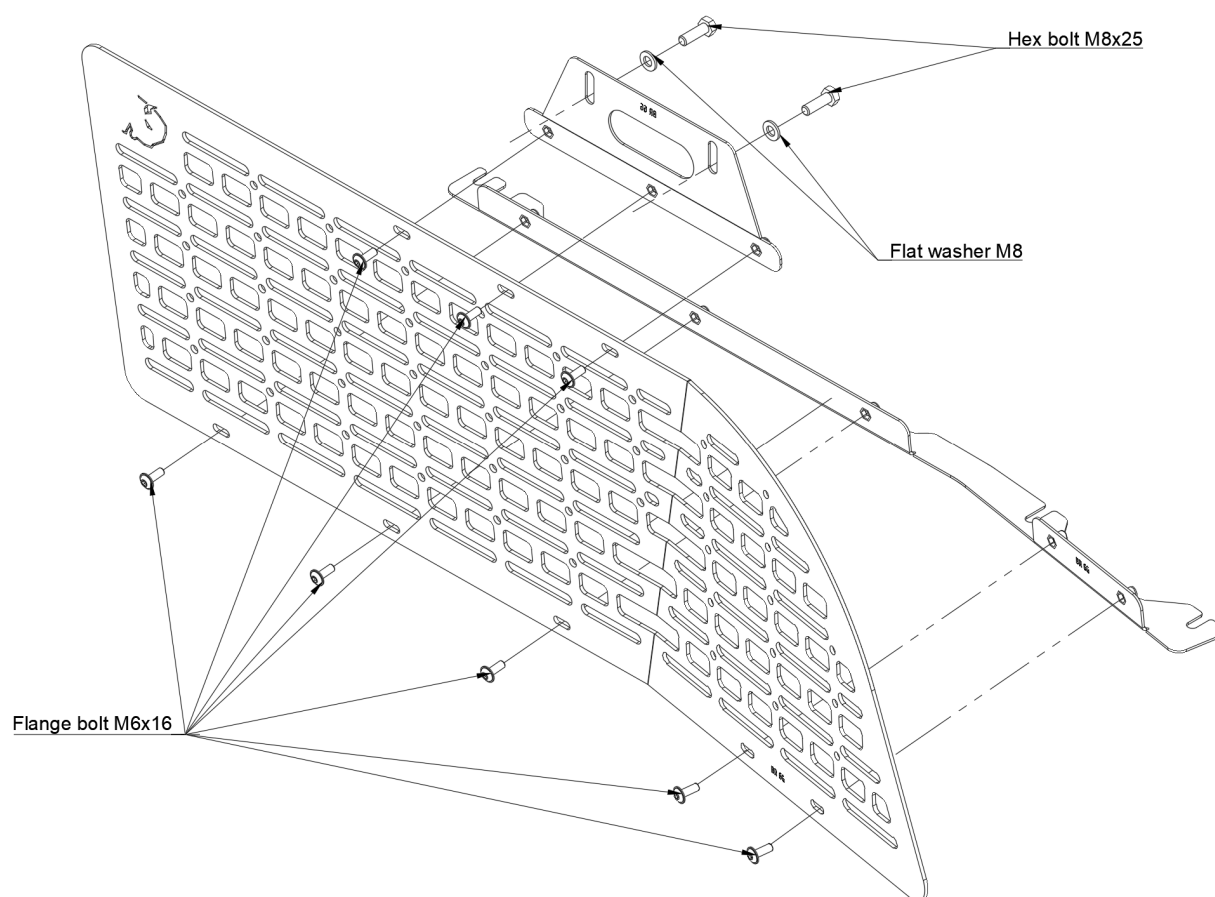
- 4 mm Allen Key (Hex)
- 13 mm wrench

¹ The tools **are not** the part of the set.



BISON GEAR

Internal MOLLE Panel Diagram

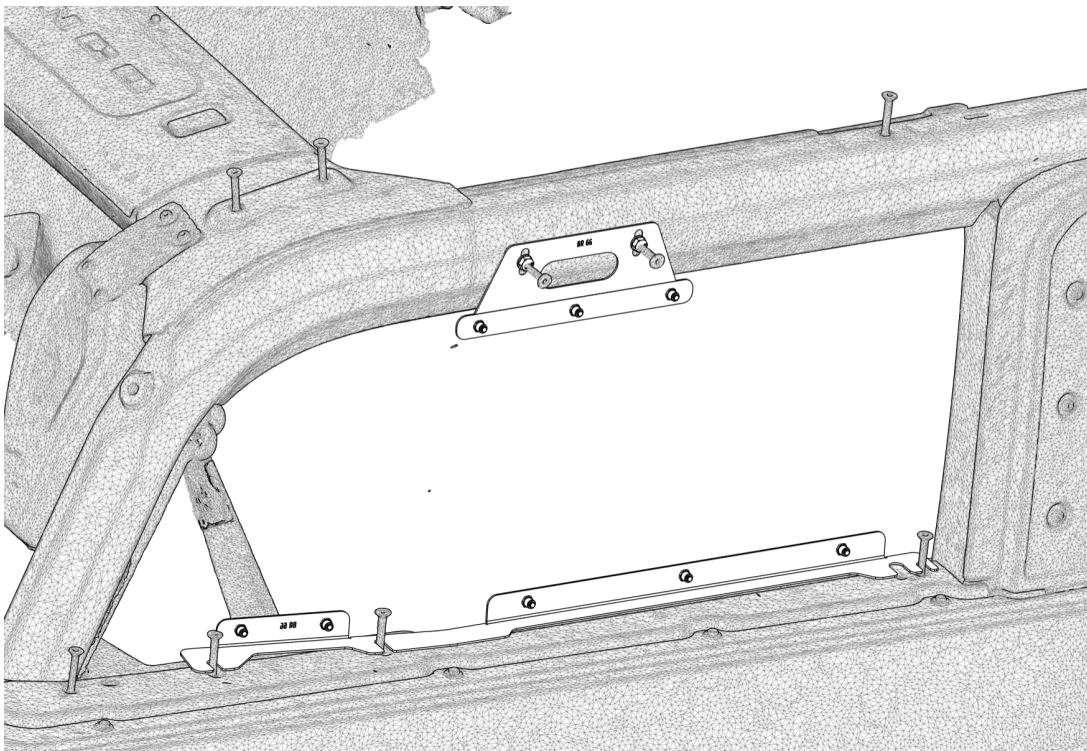




Installation:

Before you start to work familiarize with **Internal MOLLE Panel Diagram** on the **page 5**. There is an exploded view that shows you how to install the product. First read the instruction below and then follow the instructions steps to install the product correctly.

1. Install the **lower bracket** – unscrew the **three front hard top fasteners** until the gap between the screws and body is approximately 3 mm. Slide the bracket **under the bolts** and tighten them back.
2. Pre-screw the **upper bracket** using **M8x24 bolts** and **flat washers**.





BISON GEAR

3. Place the panel and regulate **upper bracket** up or down until you can screw the panel.
4. Tighten the **M8x25 bolts**.
5. Place the panel and screw it using **M6x16 flange bolts**.
6. Tighten the bolts.

Make sure that everything is mounted properly, and all the bolts are tightened. If everything is correct, your work is done.

After driving 50km with your panel, check all the bolts and retighten them if necessary.

Have good time with Bison Gear products!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**