




BISON GEAR

Ford Bronco 6G 4-Door Internal Molle Panel Installation Guide

WINPAN-BRN-6G4D-L; WINPAN-BRN-6G4D-R

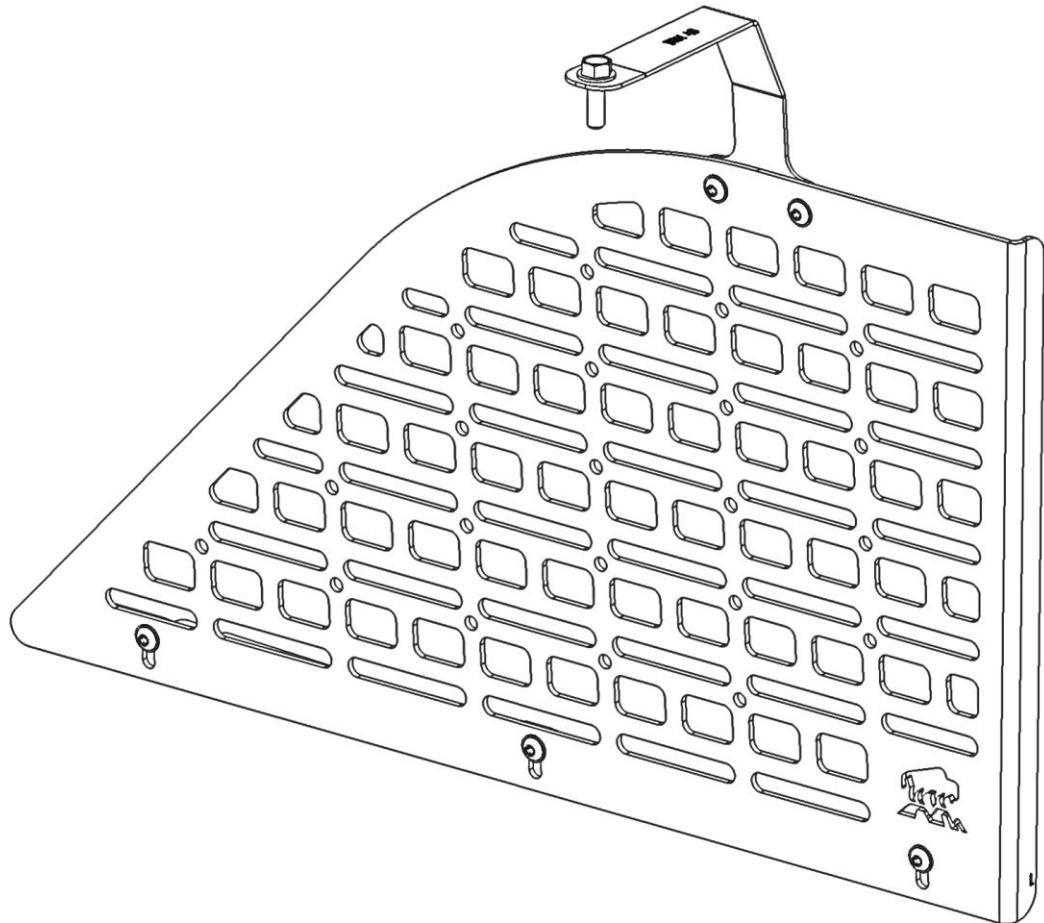



BISON GEAR

💡 Before you start

Familiarize yourself with these instructions. The Internal Molle Panel is shipped in one package. Ensure that all listed parts and hardware are present in package. Gather the required tools. The installation will necessitate one adult.

⚙️ Part list – **Left panel -WINPAN-BRN-6G2D-L**

LP	PART	QTY	IMAGE
1	Left panel	1	
2	Left lower bracket	1	
3	Upper bracket	1	
4	Flange bolt M6x16 ISO 7380-2	5	
5	Hex flange bolt M8x25 DIN 6921	1	



BISON GEAR



Part list – Right panel -WINPAN-BRN-6G2D-R

LP	PART	QTY	IMAGE
1	Right panel	1	
2	Right lower bracket	1	
3	Upper bracket	1	
6	Flange bolt M6x16 ISO 7380-2	5	
7	Hex flange bolt M8x25 DIN 6921	1	

☒ List of necessary tools¹:


- 4 mm Allen Key (Hex)
- 13 mm wrench

¹ The tools are not the part of the set.



BISON GEAR

Internal MOLLE Panel Diagram

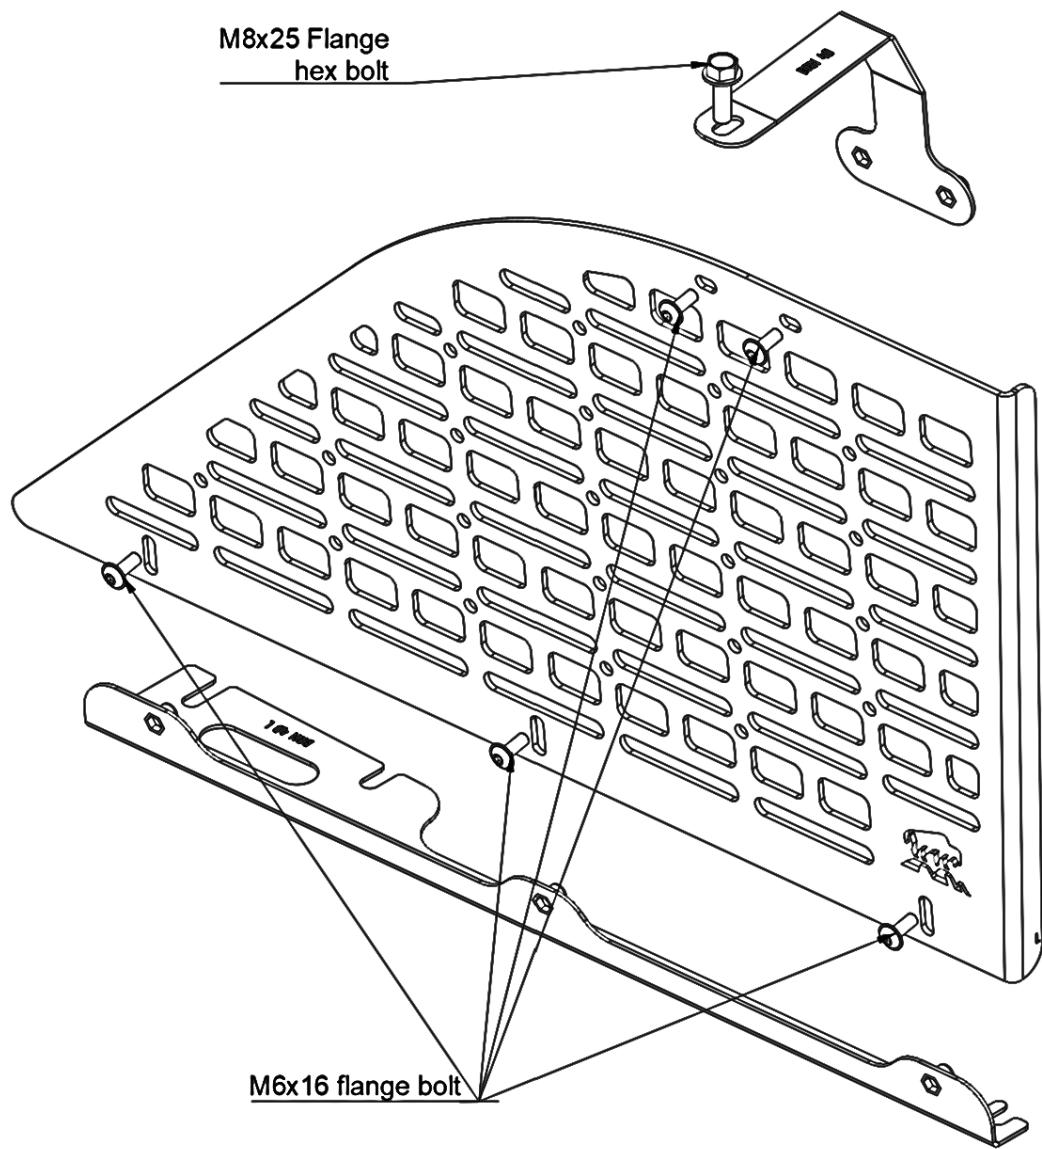




Installation:

Before you start to work, familiarize with the **Diagram** on page 4. There is an exploded view that shows you how to assemble the window panel parts together. Follow the steps below to the product correctly:

1. Install the **lower bracket** – unscrew the **three front hard top fasteners** until the gap between the screws and body is approximately 3 mm. Slide the bracket **under the bolts** and tighten them back.
2. Pre-screw the **upper bracket** using **M8x25 hex flange bolt**. Slide the bracket as close as possible to the car body and tighten the bolt.

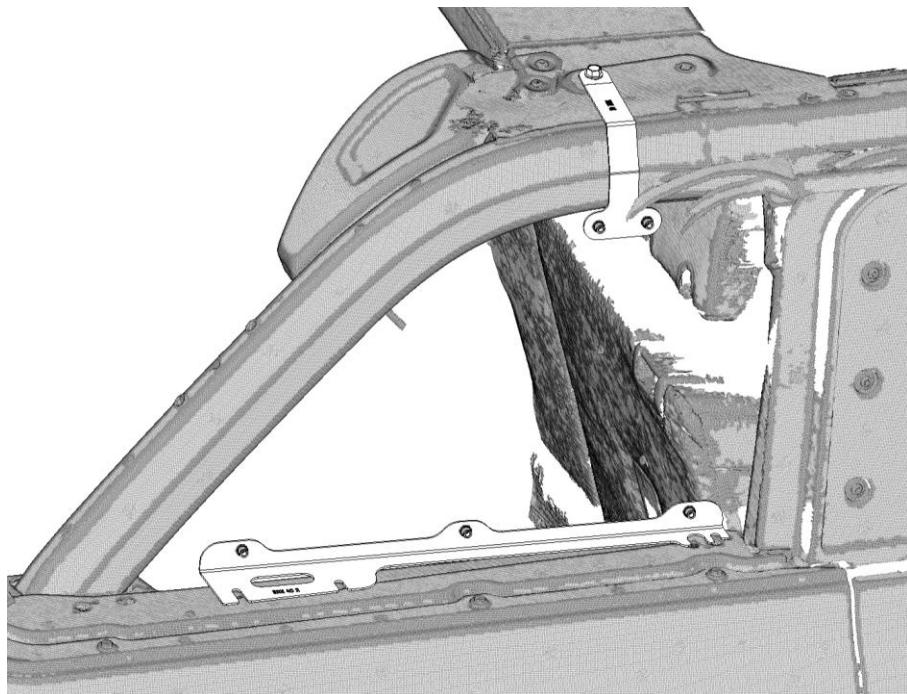



BISON GEAR

3. Place and screw the panel to the brackets using **M6x16 flange bolts**.
4. Tighten the bolts.

Make sure that everything is mounted properly, and all the bolts are tightened. If it everything is correct, your work is done.

After driving 50km with your panel, check all the bolts and retighten them if necessary.

Have good time with Bison Gear products!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**