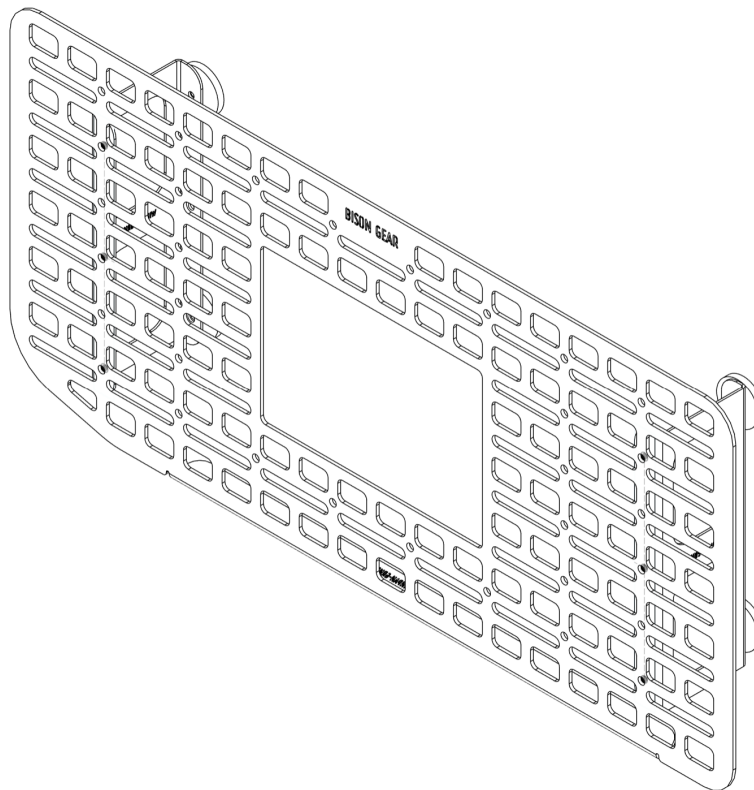




BISON GEAR

INEOS Grenadier Back MOLLE Panel Installation Guide

WINPAN-GRND-R, WINPAN-GRND-L



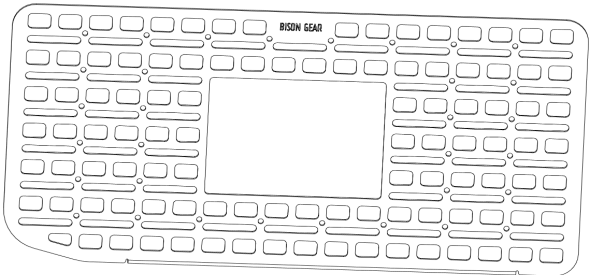
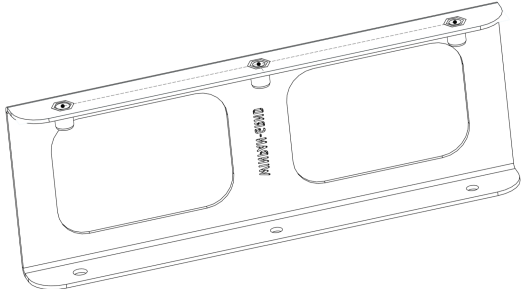

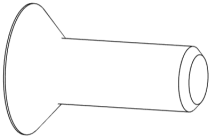
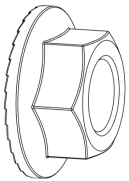
Before you start

Instruction includes information about left and right panel installation. Familiarize yourself with these instructions. The Back MOLLE Panel is shipped in one packet. Ensure that all listed parts and hardware are present in package. Locate a flat surface with a minimum area of **1 x 1 meters**. Gather the required tools. The installation will necessitate one adult.



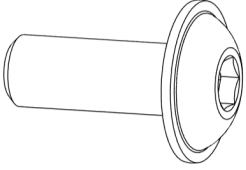

BISON GEAR

Part list -Right panel

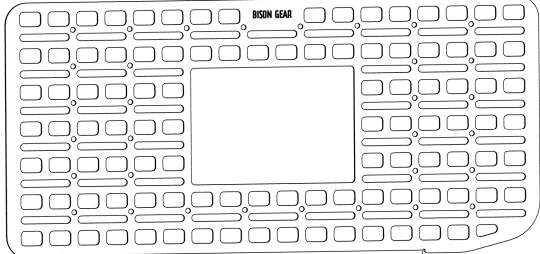
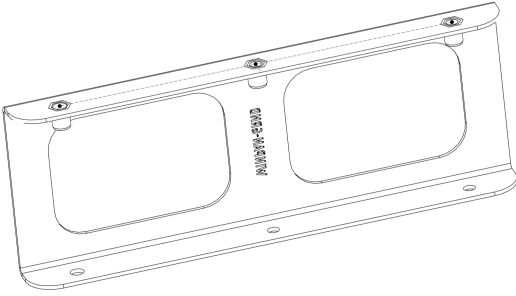
LP	PART	QTY	IMAGE
1	Right panel	1	
2	C-shape spacer	2	
3	Magnet	4	
4	Countersunk bolt M5x14 ISO 7991	4	
5	Flange nut M5 DIN-6923	4	




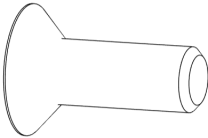
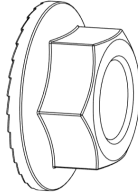
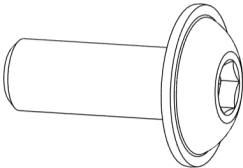

BISON GEAR

6	Flange Bolt M6x16 ISO 7380-2	6	
7	Felt tape 20 mm	52 cm	

Part list -Left panel

LP	PART	QTY	IMAGE
1	Left panel	1	
2	C-shape spacer	2	



3	Magnet	4	
4	Countersunk bolt M5x14 ISO-7991	4	
5	Flange nut M5 DIN-6923	4	
6	Flange Bolt M6x16 ISO 7380-2	6	
7	Felt tape 20 mm	52 cm	



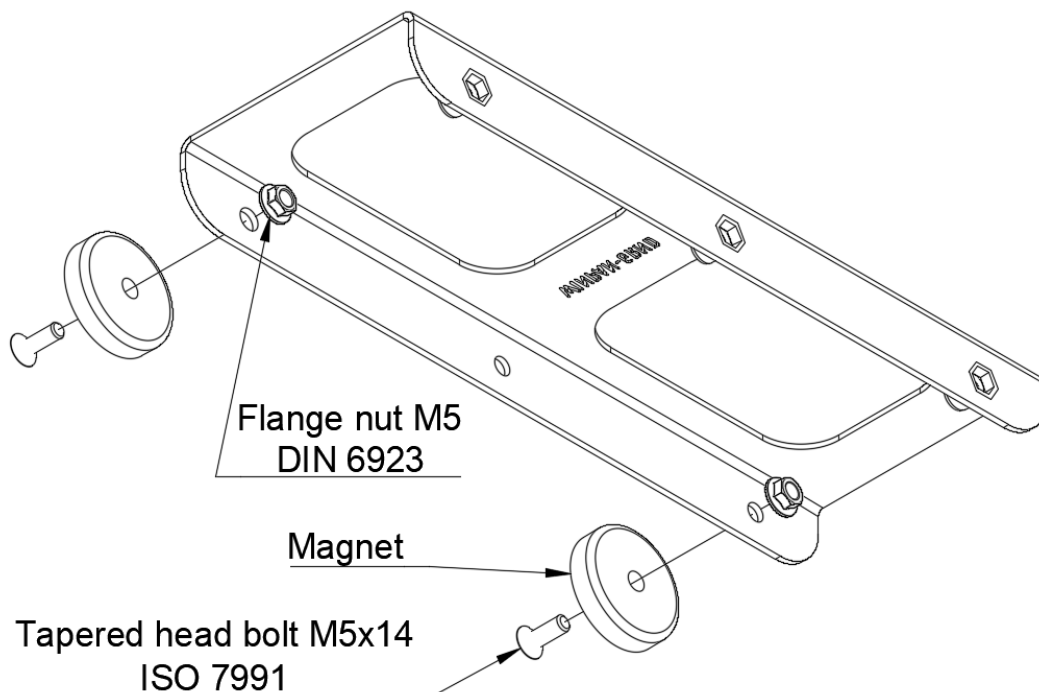
BISON GEAR

List of necessary tools¹:

- 3 mm Allen Key (Hex)
- 4 mm Allen Key (Hex)
- 8 mm wrench
- Cutter

Installation:

Before you start, you need to prepare the components before main installation. First, assemble **C-shape spacers** and **magnets** using the fasteners shown in the diagram below. Each panel (left or right) contains **two assembled spacers**.

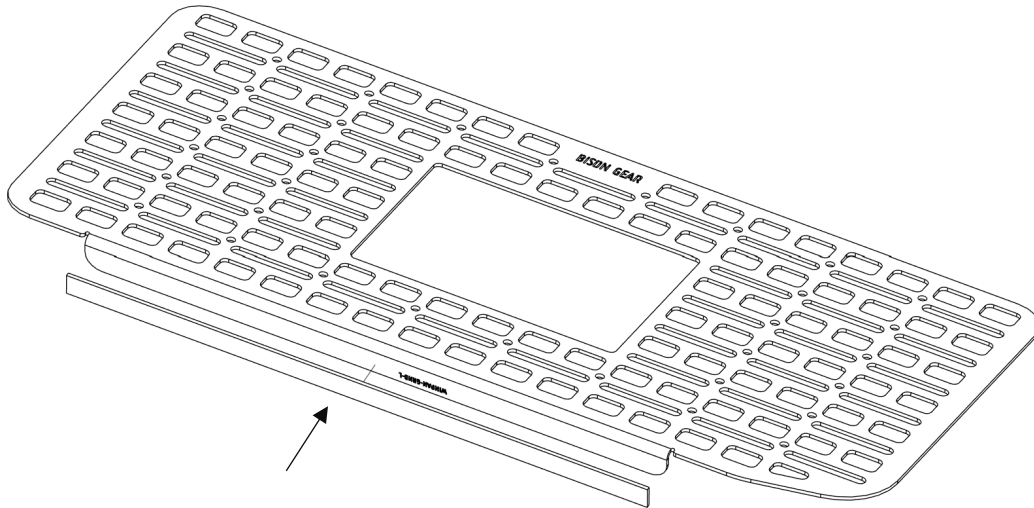


¹ NOTE: The tools **are not** the part of the set.

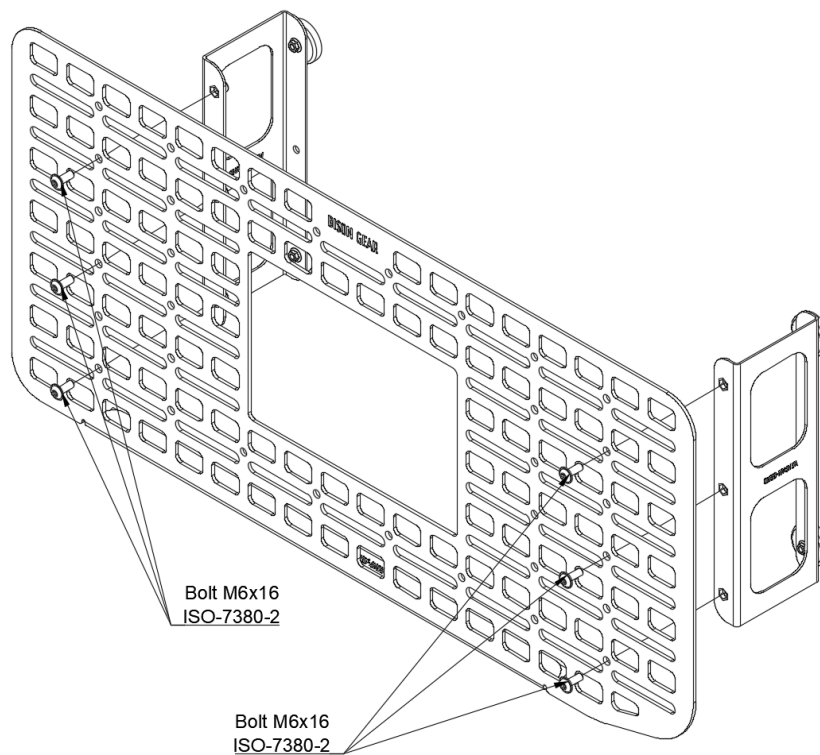


BISON GEAR

Next, you need to **glue the felt tape** (include to the kit) as shown in the diagram below. If necessary, trim excess felt tape.



Now you can **assemble all parts together**. Below is a diagram which shows you how to do it.





BISON GEAR

Put the **assembled panel** to the your's Ineos Grenadier. Be careful, **magnets are very strong**. Install the panel in such a way that the lower part of the panel should rest on the car body.

The installation method described for **left panel**. The installation of the right panel should be done in a similar way.

Make sure that everything is mount properly and the panel is stable. If it everything is correct, your work is done.

After driving 50 km with your panel, check all the bolts and re-tighten them if necessary.

Have great time with Bison Gear product!



Email: contact@bison-gear.com

Phone: **+48 505 642 981**