




FJ Cruiser Molle Panels and shelf installation guide

Left panel or left and right on cars without subwoofer

1. Attach the top bracket to the panel (use 2x M6x14 bolts, flat washers and the nuts). If you're installing a full set (including the shelf), also attach "L" brackets in slots visible on image below (leave it loose for further adjustments). Use M6x14 bolts, washers and M6 nuts.



2. Unscrew plastic hook in roof section of the car (above trunk window).
3. Unscrew two plastic hooks below the window (see picture below). Use a 10 mm socket or phillips screwdriver.
4. Attach panel to the roof (leave it loose for further adjustments)

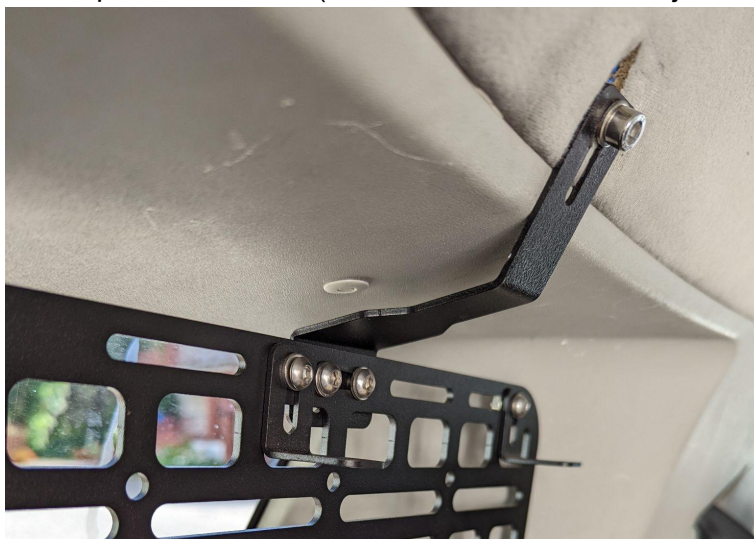




5. Using factory hooks, large plastic spacers, M6x60 bolts and washers attach panel in the bottom.





Right panel with subwoofer

1. Assemble the panels as shown in the image below (top part is identical as the one on left panel, on the bottom use angle bracket). Leave all bolts loose.

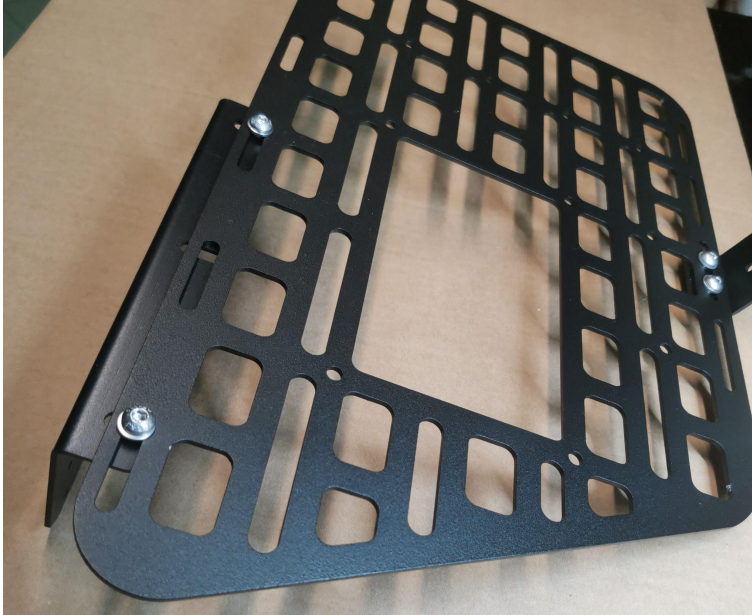

* If you will install a roof shelf install "L" brackets in the same way as on the right side of the car.

2. Remove the top hook (the one over the window).
3. Test fit the panel, and adjust it so it fits perfectly.



4. Remove the panel and remove protective film from adhesive tape.
5. Install the panel, when aligned, tighten all bolts.



Installing the shelf

1. Assemble the shelf (using attached M5x6 bolts).





2. Slide the shelf over the “L” brackets on the panels, start on one side and move the shelf up on the other side of the car (loosening the “L” bracket as much as possible should make this step easier). If you have problems with sliding it in, you can also remove one “L” bracket on the left side of the car and reinstall it once the shelf is over the rest of the brackets.



3. Bolt the shelf to the “L” brackets with 4 M4x14 bolts, washers and nuts.
 4. Check alignment, tighten all bolts.
- DONE

