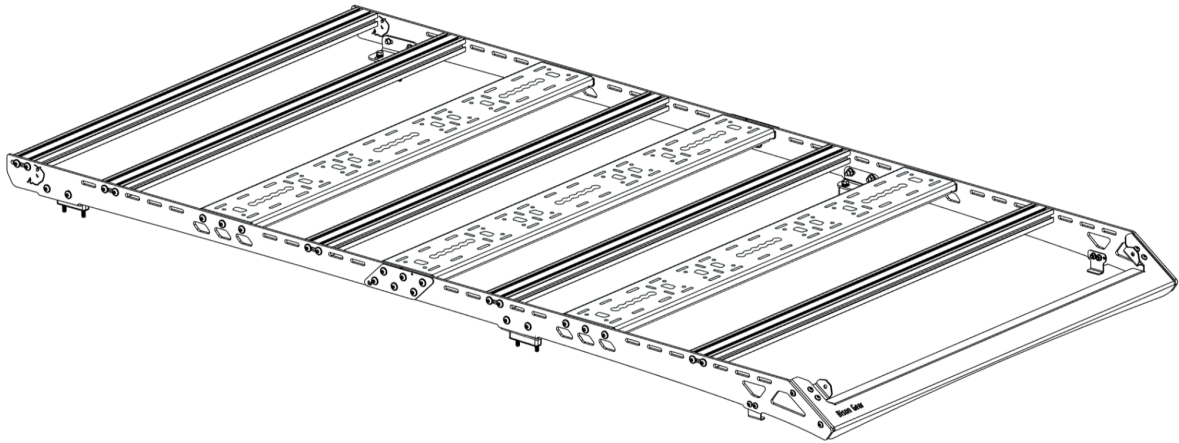









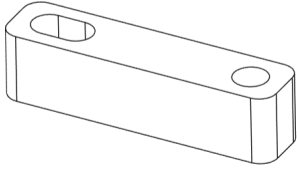
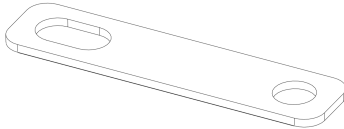
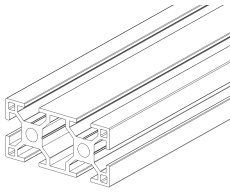
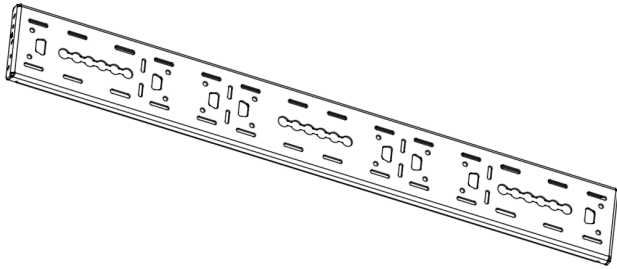
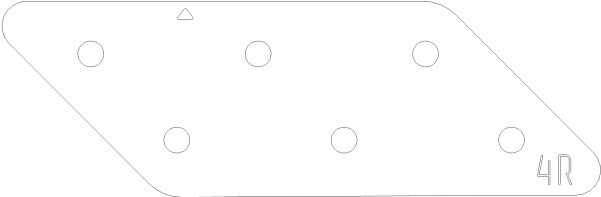
Toyota 4Runner 5 generation

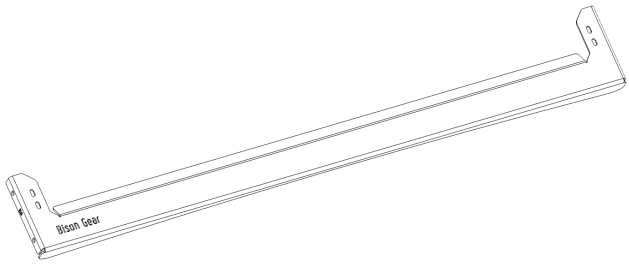
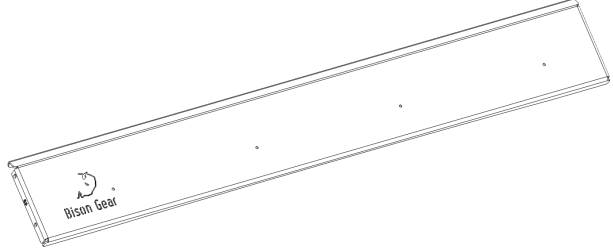
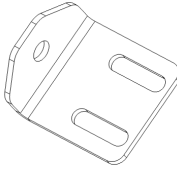
Installation Instructions



Part list

Part	QTY	IMAGE
M6 NUT	8 if LED 12	
M8 NUT	32	
M6 x 16 mm BOLT	8 if LED 12	

M8 x 25 mm BOLT	52	
M8 Hex Bolt	8	
M8 Flat Washer	8	
M8 Spring Washer	8	
Spacer	4	
Rubber Seal	4	
60x30 mm Extruded Aluminum Profile	5	
Aluminium wide bar	3	
Connecting plate	2	

Wind deflector with LED cutout	LED option 1	
Standard wind deflector	Non LED 1	
Ledbar brackte	if LED 2	

1. Remove factory rails	
2. Remove front rubber moulding from the rain gutter	
3. Clean and degreas surface	
4. Asemble the roofrack as shown on diagram 5. Install rubber weatherstrip on bottom part of the wind deflector	
6. Place roof rack on the car 7. Install paint protective transparent strip on the car roof in place where windeflector touches the roof. 8. Aling all brackets 9. Bolt roof rack to the roof with 8 M8 bolts	

- | | |
|---|--|
| <ol style="list-style-type: none">10. Remove small front bracket11. Stick front bracket with adhesive tape to the roof12. On front part push roof rack up and bolt front brackets to the side of the roof rack (roof rack must push the bracket down)13. Tightend all bolts. | |
|---|--|

IMPORTANT

After first 30 miles check all bolts and retighten if needed.

